

Fuxi-H3 User's manual FOR GAME

Trouble shooting

If the microphone doesn't work, please follow below steps to check if everything is all set.

 $1. \ Plug \ the \ detachable \ microphone \ into \ the \ microphone \ port \ in \ the \ correct \ direction \ till \ you \ hear \ a \ click \ sound.$


Earplugs Specification

Impedance: 17±15%Ω

Plug: 2.4GHz+Wireless+

Speaker: Ф40mm

2. In the Windows system, you can also adjust the default audio output device through the "Sound" settings to ensure that both the front and rear panels can be correctly recognized and used.

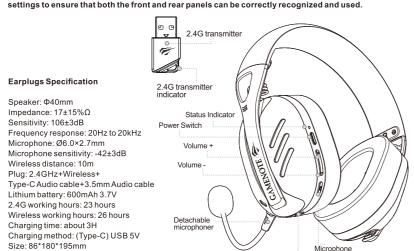

TYPE-C port ···

Operation Guide

Wired mode(Type-c Audio cable) 1)Plug in the TYPE-C cable, and long press the power switch to turn on the headphone. At this time, the neadphone is in wired mode (Note: In wireless or 2.4G mode, plugging in the TYPE-C cable will directly switch to wired mode. Unplugging the cable will automatically switch to wireless or 2.4G mode)

3) The microphone is turned on by default. To turn off the microphone, press the microphone key once (voice prompt is "beep beep"). To turn on the microphone, press the microphone key again (voice prompt is "beep")

Wired mode(3.5mm Audio cable)

1)Plug and play: Connecting the headphone to a music player with the provided dual 3.5mm audio cable, the neadphone can be used as wired headphone without starting. 2)In this mode, you can't use any function of the headphone, including pause playback, volume adjustment,

4) The headset is stereo by default. Fast press the microphone button twice to switch the virtual 7.1 sound (voice

prompt is "beep beep"), and then press it twice to switch back to stereo (voice prompt is "beep").

2.4G mode 1.How to Match

1) Turn off the headphones and remove the transmitter. 2) Press the power button to turn on the headphone, and the indicator lights up and flashes slowly. Then double-

click the power button switch to "Gaming Mode"; 3) Turn on the 2.4G receiver (plug the receiver into PC, PS4 and other devices)

4) Press and hold the microphone button for 3 seconds to enter the pairing state. After the pairing is successful, you can hear the Gaming Mode voice prompt; (Normally, the headphones are already paired before use.) 5) The headphone and receiver are automatically paired and the indicator lights up (for headphone that have already been paired).

2. Operating Instructions

1) Connect the receiver to PC/PS4 or other devices, the indicator lights up and flashes. 2) Turn on the headphone, it will automatically pair to the transmitter. The indicator will be always on after the pairing is successful. And the indicator will flash when the pairing fails. (If the pairing fails, please follow the

third step below to re-pair) 3) Short/Long press the volume+/- for volume adjustment.

4) The microphone is turned on by default. To turn off the microphone, press the microphone key once (voice prompt is "beep beep"). To turn on the microphone, press the microphone key again (voice prompt is "beep")

5) The headset is stereo by default. Fast press the microphone button twice to switch the virtual 7.1 sound (voice prompt is "beep beep"), and then press it twice to switch back to stereo (voice prompt is "beep"). (See 2.4G UI below for specific operations)

6) When the power supply of the headphone drops to 3.3V, the low-power indicator in red, 3.3V prompts, flashes red light, and the voice prompt is "Battery Low" and sounded every minute. The receiver indicator flashes; The headphone turn off below 3.25V.

	Bottom/Function/Light	Function instruction	Operation	Mark
	2.4G/Wireless switch button	Wireless free switch 2.4G mode	Double click power switch	Save last boot mode
2.4G UI	Volume+	Volume+	Click	
			Long click press	
		Next song	Double click	
	Volume -	Volume -	Click	
			Long click press	
		Previous	Double click	
		Mic on/off	Short click	The default open
	Mic on/off	2.0 stereo sound and virtual 7.1 sound switch	Double click	The default 2.0
		2.4g mode code matching	Long press 3s	
	MIC 3.5mm audio bridge	The microphone works with the microphone plug is inserted	Put 3.5mm 3pin audio plug	
	Power switch	ON/OFF	ON: Long press 3s	
	I Ower switch	014/011	OFF: Long press 3s	
		Play/Pause	Short click	
	Charging indicator	Red light	Charging often bright, full after off	
	Working indicator	Blue light	Blinking after startup, steady on after connection	

Charging TYPE-C The battery holds Quick charge detection Date interface Update the headset program 2.4G mode can identify the device Status of headphones during charging When the headphone is turned off, the headphone is turned off charged when the headphone is turned on, the headphone is USB mode 2.4G Transmitter Fuxi-H3 Transmitter USB-A plug Plug and Play Declaration: 2.4G Wireless headset 2.4G mode, access to the USB cable, automatically enter USB mode; unplug the USB cable, automatically enter 2.4G mode; USB mode function: the same function and beep as 2.4G mode; no pair code function; no switch mode function. In this mode, you can't use any function of the headphone, including pause playback, volume adjustment, microphone and so on. 3.5mm mode lower electricity remind

When the battery voltage is lower than 3.3V, the headset red light flashes, with a prompt sound every 1 minute, and the transmitter blue light flashes; Power off when battery voltage is lower than 3.25V power saving mode No connection or no audio source for 10 minutes shutdown Battery The battery holds 600mAh

HAVIT

Wireless mode

1) Turn on the headphone, double-click the power button switch to wireless mode, and you can hear the voice $prompt: "wireless\ mode".\ When\ the\ headphone\ enter\ the\ pairing\ mode,\ the\ indicator\ will\ flash\ and\ voice\ prompt$ is "power on";

3) Turn on your phone and enter wireless mode. Then search "Fuxi-H3" for paring. 4) Click "Fuxi-H3" to pair. After pairing is successful, the voice prompt is "connected", and the indicator will be always on (If the device have been paired before, the headphone will automatically connect with it under

wireless mode.) **Key Function**

Answering incoming calls

Short press the power button to answer the incoming call. Tip: As some mobile phones answer calls through their own receivers by default, please refer to your mobile phone instructions and set them on your mobile phone.

End current call Short press the power button to end the current call.

Refuse to answer the phone

When there is an incoming call, press the power button for 1.5 seconds.

1) Play/Pause: short press the power button. 2) Previous song: Double-click "Volume-"to previous song. 3) Next song: Double-click "Volume+"for the next song. 4) Volume+: Short/long press "Volume+"to increase the volume.

5) Volume-: Short/long press "Volume-"to decrease the volume.(See the wireless UI below for details.)

Bottom/Function/Light Function instruction Operation Wireless free switch Double click Save last boot power switch mode Volume+ Long click press Next song Volume - Volume - Click
Long click press
Previous Double click

Mic on/off Mic on/off Short click The default open MIC 3.5mm audio bridge

The microphone works with the microphone plug is inserted

The microphone works with the microphone audio plug ON/OFF ON: Long press 3s
OFF: Long press 3s Wireless UI Play/Pause Short click Power switch Anwser/hang up phone Short click Decline a call Long press 1.5s Red light Charging often bright, full after off Charging indicator Blue light


Blinking after startup, steady on after connection

Charging voltage 5V Max 300mA charging current

Charging

The hattery holds

Ouick charge Working indicator The battery holds Quick charge detection TYPE-C Date interface Update the headset program 2.4G mode can identify the device

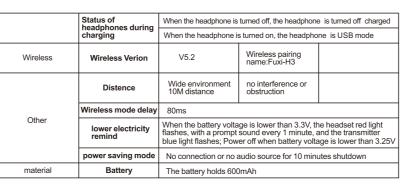

• Please follow the instruction to operate

 $\bullet \ \mathsf{PLS} \ \mathsf{charge} \ \mathsf{the} \ \mathsf{headphone} \ \mathsf{with} \ \mathsf{input} \ \mathsf{power} \ \mathsf{below} \ \mathsf{3.3V}, \mathsf{in} \ \mathsf{order} \ \mathsf{to} \ \mathsf{protect} \ \mathsf{the} \ \mathsf{battery};$ • Please store or use the headphone in a normal temperature environment.

• PLS keep the headphone from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti-high temperature.

• Don't jam the ports of the headphone, such as charger port, LED port and microphone etc.

• In order to protect your hearing and extend the headphone service life, it is not recommended to adjust the volume to the maximum level for a long time. • Whatever reasons damage the headphone, please feel free to contact our after-sales staff in time rather than repair by yourself. Otherwise, you will accept without after-sales service.



Cód. de Homologação 17778-23-12374 ESTE EQUIPAMENTO NÃO TEM DIREITO À PROTEÇÃO CONTRA INTERFERÊNCIA PREJUDICAL E NÃO PODE CAU SAR INTERFERÊNCIA EM SISTEMAS DEVIDAMENTE AUTO RIZADOS.