

# HUAWEI Mate Xs

## User Guide



HUAWEI

# Contents

## Essentials

Basic Gestures	1
System Navigation	3
Phone Clone	4
Lock and Unlock Your Screen	5
Notification and Status Icons	6
Shortcut Switches	7
Home Screen Widgets	8
Set Your Wallpaper	8
Screenshots&Screen Recording	8
View and Clear Notifications	11
Adjust Sound Settings	12
Enter Text	13
Split-screen Mode and Floating Window	13
Show Date and Time When the Screen Is Off	15
Power On and Off or Restart Your Device	15
Charging	16

## Smart Features

AI Lens	18
HiTouch	18
Easy Projection	18
Huawei Share OneHop	20
Huawei Share	22
Smart Remote	24

## Camera and Gallery

Launch Camera	25
Take Photos with Your Foldable Device	25
Take Photos	26
Shoot in Portrait, Night, and Wide Aperture Modes	26
Master AI	28
Zoom to Take Photos	29
Super Macro	29
Take Panoramic Photos	30
Take Black and White Photos	30
Light Painting	31
Take HDR Photos	32
Moving Pictures	32
Add Stickers to Photos	33
Documents Mode	33

Pro Mode	34
Record Videos	35
AI Movie Effects	36
4K HD Videos	36
Slow-Mo Recording	36
Time-Lapse Photography	37
Leica Colors	38
Filters	38
Edit Camera Modes	39
Adjust Camera Settings	39
Manage Gallery	40
Smart Photo Categorisation	44
Huawei Vlog Editor	45
Huawei Vlogs	46
Highlights	47

## Apps

Apps	49
Contacts	50
Phone	53
Messaging	59
Calendar	61
Clock	62
Notepad	64
Recorder	65
Email	66
Calculator	70
Torch	70
Compass	71
Mirror	72
App Twin	72
Quickly Access Frequently Used App Features	73
Optimizer	73
Phone Clone	76
HiSuite	77
Tips	78

## Settings

Search for Items in Settings	79
Wi-Fi	79
Bluetooth	80
Mobile Data	81
More Connections	85
Home Screen&Wallpaper	90


	Contents
Display&Brightness	91
Sounds&Vibration	95
Notifications	97
Biometrics&Password	99
Apps	101
Battery	102
Storage	103
Security	103
Privacy	107
Accessibility Features	110
Users&Accounts	112
System&Updates	113
About Phone	117


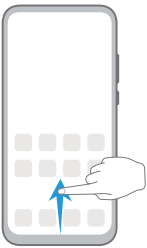 
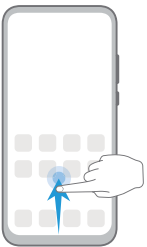 
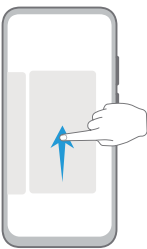 
# Essentials

## Basic Gestures

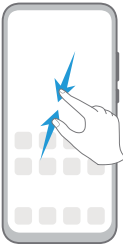
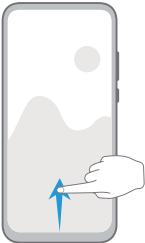
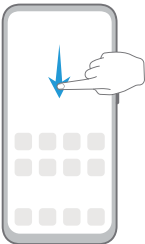
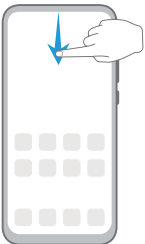
### Basic Gestures

#### System Navigation Gestures

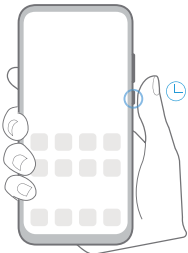
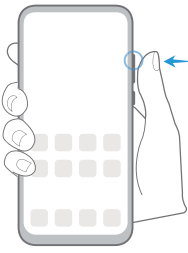
Go to  **Settings** > **System & updates** > **System navigation** and ensure that **Gestures** is selected.

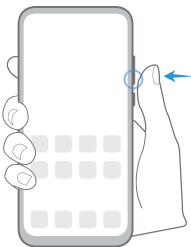 
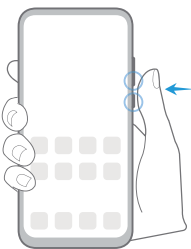 
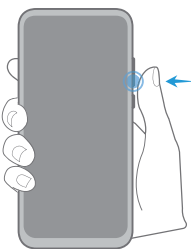 
	<p><b>Back</b> Swipe inward from the left or right edge to return to the previous screen.</p>
	<p><b>Back to the home screen</b> Swipe up from the bottom to go to the home screen.</p>
	<p><b>View recent tasks</b> Swipe up from the bottom of the screen and hold to view recent tasks.</p>
	<p><b>Close an app</b> On the recent tasks screen, swipe up on an app preview to close the app.</p>

## More Gestures

	<p><b>Access Home screen editing mode</b> Pinch two fingers together on the home screen.</p>
	<p><b>Display the shortcut panel on the lock screen</b> Swipe up from the bottom of the lock screen.</p>
	<p><b>Display the search bar</b> Swipe down on the home screen.</p>
	<p><b>Open the notification panel</b> Swipe down from the status bar.</p>


## Button Shortcuts

	<p><b>Power off and restart</b> Press and hold the Power button until the <b>Power off</b> and <b>Restart</b> options appear.</p>
	<p><b>Increase the volume</b> Press the Volume up button.</p>


	<p><b>Decrease the volume</b> Press the Volume down button.</p>
	<p><b>Take a screenshot</b> Press the Volume down and Power buttons simultaneously.</p>
	<p><b>Ultra snapshot</b> Double-press the Volume down button when the screen is off or locked to take a photo.</p>

## System Navigation

### Change the Navigation Mode

Go to  **Settings** > **System & updates** > **System navigation** to select a navigation mode according to your preferences.


### Navigate with Gestures

Go to  **Settings** > **System & updates** > **System navigation** and enable or disable **Gestures**.

After enabling **Gestures**, you can:





- Go back to the previous screen: Swipe inward from the left or right edge.
- Return to the home screen: Swipe up from the bottom of the screen.
- Access the recent tasks screen: Swipe up from the bottom of the screen and hold.
- Close an app from the recent tasks screen: Swipe up on an app preview.

### Three-Key Navigation

Go to  **Settings** > **System & updates** > **System navigation**, and select **Three-key navigation**.

Touch **Settings** to select the navigation key combination you prefer.

The icons on the navigation bar are as follows:


- : Back key to return to the previous screen, exit an app, or close the onscreen keyboard.
- : Home key to return to the home screen.
- : Recents key to display the recent tasks screen.
- : Notification key to open the notification panel.

### Customise the Navigation Key Combination

Go to **Three-key navigation** > **Settings**. You can:

- Select a navigation key combination.
- Enable **Hide navigation keys** to allow you to hide the navigation bar when not in use.

### Navigation Dock

Go to  **Settings** > **System & updates** > **System navigation** > **Navigation dock**, and enable **Navigation dock**.

After the Navigation dock button appears, you can:




- Drag the button to your desired position.
- Touch the button to go back.
- Double-touch the button to go back two steps.
- Touch and hold the button, then release it to go back to the home screen.
- Touch and hold the button, then swipe left or right to view recent tasks.

## Phone Clone


### Phone Clone

**Phone Clone** lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.




#### Clone Data from an Android Device


- 1 On your new device, open  **Phone Clone**. Alternatively, go to  **Settings** > **System & updates** > **Phone Clone**, touch **This is the new phone**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.



 Phone Clone is only available on devices running Android 4.4 or later.

## Clone Data from an iPhone or iPad

- 1 On your new device, open  **Phone Clone**. Alternatively, go to  **Settings** > **System & updates** > **Phone Clone**, touch **This is the new phone**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 Phone Clone is only available on devices running iOS 8.0 or later.

## Lock and Unlock Your Screen

### Lock and Unlock Your Screen

#### Lock the Screen

If your device remains inactive for a period of time, it will automatically lock the screen and enter sleep mode to save power.

Alternative, you can manually lock the screen in either of the following ways:


- Press the Power button.
- On the home screen, pinch two fingers together to enter screen editing mode. Touch **Widgets**, then drag the **Screen Lock** icon to the home screen. You can now touch the **Screen Lock** icon to lock the screen.

#### Set the Screen Timeout Period

Go to  **Settings** > **Display & brightness** > **Sleep** and select a screen timeout period.

#### Wake Screen

You can turn on the screen in either of the following ways:

- Press the Power button.
- Go to  **Settings** > **Accessibility features** > **Shortcuts & gestures** > **Wake screen** and enable **Raise to wake** or **Double-tap to wake**.
  - When **Raise to wake** is enabled, you can pick up your device to turn on the screen.
  - When **Double-tap to wake** is enabled, you can touch the screen twice to turn it on.

## Unlock the Screen with Password

Once the screen is turned on, swipe up from the middle of the screen to display the password input panel. Then, enter your lock screen password.

## Unlock Your Device with Your Fingerprint

Press an enrolled finger against the fingerprint sensor to unlock your device.

## Change the Lock Screen Display


### Display Your Signature on the Lock Screen

Go to  **Settings** > **Home screen & wallpaper**, touch **Lock screen signature**, then type text to display on the lock screen.

To remove the signature, touch **Lock screen signature** and delete the text.


## Access Apps from the Lock Screen















You can access commonly used apps such as Camera, Recorder, and Calculator from the lock screen.



































- Turn on the screen, touch and hold , then swipe up to open **Camera**.
- Turn on the screen, then swipe up from the bottom of the lock screen to open the shortcut panel. Shortcuts for **Recorder**, **Torch**, **Calculator**, and **Timer** will be available.

# Notification and Status Icons

## Notification and Status Icons

-  Network status icons may vary according to your region or network service provider. Supported functions vary according to the device model. Some of the following icons may not be applicable to your device.

	5G network connected		4G network connected
	3G network connected		2G network connected
	Full signal strength		Roaming
	Data saver enabled		SIM card not found
	Hotspot enabled		Hotspot connected
	Calling		VoLTE enabled
	Wi-Fi network connected		SkyTone in use


	Hotspot disconnected		Network being switched by Wi-Fi +
	Airplane mode enabled		Alarms set
	Battery empty		Battery low
	Charging		Quick charging
	Super charging		Power saving mode enabled
	Bluetooth enabled		Bluetooth device battery
	Bluetooth device connected		VPN connected
	Driving mode		Projection device connected
	Location service enabled		Eye comfort mode enabled
	Headset connected		Headset with a microphone connected
	Missed call		Unread SMS
	Microphone disabled		Muted
	More notifications		Vibrate only
	NFC enabled		Do Not Disturb mode enabled
	Data syncing		Data sync failed
	Performance mode enabled		New emails
	Event reminders		Digital balance enabled

## Shortcut Switches


### Shortcut Switches

#### Turn on a Shortcut Switch

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.

- Touch a shortcut switch to enable or disable the corresponding feature.
- Touch and hold a shortcut switch to enter the settings screen for that feature.
- Touch  to open Settings.

### Customise Shortcut Switches

Touch , touch and hold an icon, then drag it to the desired position.

## Home Screen Widgets

### Home Screen Widgets

You can add, move, or delete home screen widgets, such as Screen lock, Weather, Notepad, Clock, Contacts, and Calendar, according to your personal requirements.

#### Add a Widget to the Home Screen

- 1 Pinch two fingers on the home screen to access Home screen settings mode.
- 2 Touch **Widgets**, then swipe left to view all widgets.
- 3 Some widgets, like **Weather**, come in various formats. Touch the widget to view all formats, then swipe right to return.
- 4 Touch a widget to add it to the home screen. If there is no room on the current screen page, touch and hold it, then drag it to a different screen page.



#### Move or Delete a Widget

Touch and hold a widget on your home screen until your device vibrates, then drag it to the desired position or touch **Remove**.

## Set Your Wallpaper

### Set Your Wallpaper


#### Set an Image from Gallery as Your Wallpaper

- 1 Open  **Gallery**, and open the image you want to set as your wallpaper.
- 2 Go to  > **Set as** > **Wallpaper**, then follow the onscreen instructions to complete the setting.

## Screenshots&Screen Recording

## Take a Screenshot


### Use Your Knuckle to Take a Screenshot

- 1 Go to  **Settings** > **Accessibility features** > **Shortcuts & gestures** > **Take screenshot**, and ensure that **Knuckle screenshots** is enabled.
- 2 Knock the screen twice in quick succession with one knuckle to take a screenshot.

### Use a Key Combination to Take a Screenshot

Press and hold the Power and Volume down buttons simultaneously to take a screenshot.

### Use a Shortcut to Take a Screenshot

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts. Touch  to take a screenshot.

### Share and Edit a Screenshot, or Switch to Scrollshot



After you take a screenshot, a thumbnail will display in the lower left corner of the screen. Then you can:

- Swipe down on the thumbnail to take a scrolling screenshot.

- Swipe up on the thumbnail to select a sharing mode and share the screenshot with your friends.
- Touch the thumbnail to edit or delete it.

Screenshots are saved to **Gallery** by default.


### Use Your Knuckle to Take a Scrolling Screenshot



- 1 Knock the screen with a knuckle and hold to draw an "S". The screen will automatically scroll down to the bottom for you to capture the entire page.
- 2 You can touch the screen at any point to stop the screenshot.

### Take a Partial Screenshot

- 1 Knock the screen with a knuckle and hold to draw an outline around the part of the screen that you want to capture. Make sure that your knuckle does not leave the screen.
- 2 The screen will display the movement trajectory of your knuckle and take a screenshot of the selected area. You can then:
  - Drag the frame to the desired position or resize it.
  - Touch a shape icon to determine the shape of the partial screenshot.

- 3 Touch  to save the screenshot.

## Record the Screen

Record your screen activities in sharable videos to compose a tutorial, show off your awesome gaming skills, and a lot more.


### Use a Key Combination to Start Screen Recording

Press and hold the Power and Volume up buttons simultaneously to start screen recording. To stop recording, press and hold both buttons again.

### Use a Shortcut to Start Screen Recording

- 1 Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.
- 2 Touch **Screen Recorder** to start screen recording.
- 3 To stop the recording, touch the timer at the top of the screen.
- 4 The recording will be saved to **Gallery**.

### Use Two Knuckles to Start Screen Recording

- 1 Go to  **Settings** > **Accessibility features** > **Shortcuts & gestures** > **Record screen**, and ensure that **Record screen** is enabled.
- 2 Knock the screen twice in quick succession with two knuckles to start screen recording. To stop recording, knock twice again.

## Record Your Voice During Screen Recording


You can enable the microphone to record your voice while recording the screen.

After starting a screen recording, touch the microphone icon and ensure that it is displayed as



. You can now record your voice.



If the microphone is disabled (if it is displayed as ) , you will only be able to record system sounds, such as music. If you don't want any system sounds in your screen recording, mute your device and turn off any music or other media sounds before starting the screen recording.

## View and Clear Notifications

### View and Clear Notifications

#### View Notifications

When there is a notification reminder, you can turn on the screen and swipe down from the status bar to open the notification panel and view the notification.


#### Clear Notifications

- Swipe right on a notification reminder to clear the notification.

- Touch  at the bottom of the notification panel to clear all notifications.

### Block, Silence, or Delay Notifications

Swipe left on a notification, then touch  to block, silence, or delay notifications from that source.

-  Some system notifications can't be blocked, cleared, or delayed.

## Adjust Sound Settings

### Adjust Sound Settings

#### Press a Volume Button to Adjust the Volume


Press the Volume up or down button to adjust the volume.

#### Press the Power Button to Mute Your Device When It Rings


When your device rings for an incoming call or alarm, you can press the Power button to mute it.

#### Flip to Mute or Raise to Reduce Ringing Volume

When you receive an incoming call, you can flip your device to mute it, or raise it to reduce the ringing volume.




Go to  **Settings** > **Accessibility features** > **Shortcuts & gestures** > **Mute ringtone/Reduce volume**, then enable **Flip to mute ringtone** and **Raise to lower volume**.

#### Set the Default Volume

Go to  **Settings** > **Sounds & vibration**, then you can set the volume for the following items:

- Media (video, games, music, and more)
- Ringtones
- Alarms
- Calls

#### Use a Shortcut to Switch Between Ring, Vibrating, or Mute Mode




- 1 Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts.
- 2 Touch the  **Sound**,  **Silent**, or  **Vibration** icon to switch between different modes.



## Enter Text

### Edit Text

You can select text displayed on your screen, copy or cut it to the clipboard, then paste it somewhere else. You can also share it in multiple ways.






- 1 Touch and hold the text until  appears.
- 2 Drag  and  to select the text you need, or touch **Select all** to select all text.
- 3 Touch **Copy** or **Cut** as needed.
- 4 Touch and hold the space where you want to paste the text until **Paste** appears, then touch **Paste**.

## Split-screen Mode and Floating Window

### Multi-Window

Multi-Window allows you to open apps in split screens or in a floating window for multitasking.




#### Enable Split-screen Mode from the Multi-Window Dock

- Enable Split-screen mode:
  - 1 Open an app and swipe inward from the left or right edge and hold to bring up the Multi-Window dock.
  - 2 Drag an app icon out of the Multi-Window dock.
- Switch the split-screen panes: Touch and hold  or  at the top of a split-screen pane until the pane shrinks. Then drag the pane to the other side of the screen to switch them.
- Exit Split-screen mode: Drag  or  in the middle of the split screen line horizontally or vertically until either pane disappears.
-  Support for Split-screen mode varies by app.
  - The screen of a single app can't be split into two.
  - Split-screen mode applies only to two apps at any given time.

#### Display the Floating Window from the Multi-Window Dock

While playing a game, you can also chat with your friend in a floating window, without having to exit the game.

- Display the floating window:
  - 1 Swipe inward from the left or right edge and hold to bring up the Multi-Window dock.


- 2 Touch an app icon in the Multi-Window dock to open the app in a floating window.
- Relocate the floating window: Drag the floating window to the desired location.
- Display in full screen: Touch  on the floating window to display the content in the window in full screen.
- Close the floating window: Touch  on the floating window to close it.
-  The size of the floating window cannot be adjusted.

### Switch Between Split-screen and Floating Window





- Switch from Split-screen mode to floating window: Touch and hold a split-screen pane, then drag it to the left or right when in Portrait mode, or drag it downwards in Landscape mode.
- Switch from floating window to Split-screen mode: Touch and hold the bar at the top of the floating window, then drag it to the upper/lower part of the screen when in Portrait mode, or to the left or right when in Landscape mode.

### Drag and Drop Between Apps with Multi-Window


Use the Multi-Window feature to easily drag and drop images, text, and documents between apps.

- Drag and drop an image: When taking notes with **Notepad**, open **Files**, select the photo you want to add, and drag it into the **Notepad** editor.
- Drag and drop text: When sending a message with WeChat, open **Notepad**, touch and hold the text you want to send, and drag it to the text input box in WeChat.
- Drag and drop a document: When writing an email, open **Files**, select the document you want to attach, and drag it into the email editor.
-  Not all apps fully support drag-and-drop with Multi-Window.

### Add, Move, or Remove an App from the Multi-Window Dock

- Add an app: In the Multi-Window dock, touch , touch the app you want to add from **Suggested** or **More apps**, then touch **Done**.
- Move an app: In the Multi-Window dock, touch , drag the desired app to any location in the dock, then touch **Done**.
- Remove an app: In the Multi-Window dock, touch , touch  in the upper right corner of the icon of the app you want to remove, then touch **Done**.


### Disable Multi-Window

Multi-Window is enabled by default. To disable it, go to  **Settings > Accessibility features > Multi-Window**, then disable **Multi-Window dock**.

## APP Multiplier

**App Multiplier** displays an app's home and content screens in dual windows for easier multitasking when your device is unfolded.

This feature will only work for applicable apps.


- 1 Go to  **Settings** > **Apps** > **App Multiplier** and turn on the switch for apps that you want to enable this feature for.
- 2 Open an app that has **App Multiplier** enabled. The app's home screen will then be displayed in the centre of the screen.
- 3 Touch an entry on the app's home screen. The home screen will then be relocated to the left to make space for the new screen.  
If no extra content is available for the entry that you touched, the app will remain displayed in one window.

## Show Date and Time When the Screen Is Off

### Always On Display


With **Always On Display** enabled, the lock screen will show the date, time, and more when the screen is off.

### Enable Always on Display

- 1 Go to  **Settings** > **Home screen & wallpaper** > **Always On Display** > **Always On Display**, and enable **Always On Display**.
- 2 Set the **Start** and **End** according to your preferences.

### Set Clock Style for Always on Display

You can customise the clock style for **Always On Display** according to your preferences.

- 1 On the **Always On Display** screen, touch **Clock style**, and swipe across to view the available clock styles.
- 2 Select a preferred clock style, and touch .

## Power On and Off or Restart Your Device

### Power On and Off or Restart Your Device

#### Power Your Device On and Off

To power off your device, press and hold the Power button for a few seconds, touch **Power off** and **Touch to power off**.

To power on your device, press and hold the Power button for a few seconds until your device vibrates and displays the logo.

## Restart Your Device

Restart your device on a regular basis to clear the cache and keep the device in an optimal state. A restart can sometimes resolve the issue when your device encounters a problem. Just press and hold the Power button for a few seconds, then touch **Restart** and **Touch to restart**.

## Force Restart Your Device

If your device isn't working or won't turn off normally, you can force restart it. Just press and hold the Power button for 10 seconds or longer.

# Charging

## Charge Your Device

Your device will alert you when it is running out of power. Please make sure to charge your device in time to prevent it from turning off automatically when the power runs out.

## Precautions for Charging

- Charge your device using the standard adapter and USB cable that came with your device. Using other chargers or USB cables may cause repeated restarts, slow charging, overheating, or other undesirable effects.
- Your device will automatically run a safety check when a charger or other device is connected to the USB port. If moisture is detected in the USB port, your device will automatically activate safety measures and stop charging. Disconnect your device from the USB port and wait until the USB port is dry.
- The time required to fully charge the battery depends on the ambient temperature and age of the battery.
- Batteries have a limited number of charge cycles. When the battery life becomes noticeably shorter, go to an authorised Huawei Customer Service Centre to replace the battery.
- Do not cover your device or charger during charging.
- Your device may heat up when you have been using it for an extended period of time, especially in high temperatures. In this case, stop charging, disable some features, and move your device to a cool place.
- Please do not use your device while it is charging.
- If your device does not respond after you press and hold the Power button, the battery may have run out. Charge for 10 minutes and then power it on.

## Using the Charger that Came with Your Device





- 1 Use the USB cable that came with your device to connect your device and the adapter.
- 2 Plug the adapter into a power socket.

## Charging Your Device With a PC

- 1 Connect your device to a PC or other device using a USB cable.
- 2 When the **Use USB to** dialog box is displayed on your device, touch **Charge only**. If another option has been set previously, the dialog box will not pop up. Swipe down from the status bar to open the notification panel, touch **Settings**, then select **Charge only**.

## Overview of Battery Icons

You can check the battery level from the battery icon on the device screen.

Battery Icon	Battery Level
	Less than 4% battery remaining
	Charging, less than 10% battery remaining
	Charging, 10% to 90% battery remaining
	Charging, at least 90% battery remaining If 100% is displayed next to the battery icon, or a charging complete message is displayed on the lock screen, the battery is fully charged.

## Reverse Charging with an OTG Cable

On-The-Go (OTG) is a USB transmitting technology that allows a device to directly access files on a USB flash drive or digital camera, or connect to an external device such as a keyboard or mouse, with the help of an OTG cable.

You can use your device to charge other devices using an OTG cable.



- 1 Connect your device with the device to be charged using an OTG cable.
- 2 When the **Use USB to** dialog box is displayed on your device, touch **Reverse charge**. If another option has been set previously, the dialog box will not pop up. Swipe down from the status bar to open the notification panel, touch **Settings**, and then select **Reverse charge**.
- 3 Follow the onscreen instructions on the device to be charged to start charging.

# Smart Features

## AI Lens




### Scan Codes

HiVision can read various QR codes and instantly direct you to the corresponding app screen.

- 1 Open the camera, touch , then touch .
- 2 Place the QR code within the scan frame and wait for it to be recognised.

### Scan to Shop


The Shopping feature of HiVision lets you scan goods to get purchase recommendations for similar items online.

- 1 Open the camera, touch , then touch .
- 2 Frame the target object in the viewfinder. You will be given purchase recommendations once the object has been recognised. You can also touch  to take a photo, which will be recognised automatically.

## HiTouch

### Convenient Shopping

When you see an item you wish to buy on your device screen, touch and hold it with two fingers to search for it online, and touch the displayed links to view more details.

- 1 Go to  **Settings** > **Accessibility features** > **HiTouch**, then enable **HiTouch**.
- 2 Touch and hold the item you wish to purchase with two fingers spread slightly apart.
- 3 After the subject is identified, links to the item on different shopping platforms will then display.
- 4 You can also adjust the position and size of the identification box to select other items you're interested in.
- 5 Touch the links to view product details and make a purchase.

## Easy Projection


### Wireless Projection

You can connect your device to an external display (for example, a TV) wirelessly.


- 1 Based on the model and functions of your external display, do the following:

- If the external display supports Miracast, enable wireless projection on it.
- If not, use a wireless HDMI adapter to connect your device and external display. Ensure that the wireless HDMI adapter is connected to a power supply.

To check whether your external display supports Miracast and how to enable wireless projection on it, consult the user guide or customer service of the external display manufacturer.

**2** Swipe down from the status bar to open the notification panel, then touch  to turn on **Wi-Fi**.

**3** Swipe down further on the notification panel to enable **Wireless Projection**. Your device will now search for the external display or the wireless HDMI adapter.

Alternatively, go to  **Settings** > **More connections** > **Easy Projection** and enable **Wireless Projection**.

**4** Touch the name of the external display or the wireless HDMI adapter on the search result list to start projecting.

## Wired Projection

- 1** Prepare a Type-C cable.  
Use a Type-C to HDMI, Type-C to DP, or Type-C to MiniDP cable depending on your external display.
- 2** Connect the Type-C end to your device and the other end to the external display.
- 3** On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

## Projection Using a Docking Station

If you need to connect your device to an external display and use a wired mouse and keyboard, use a docking station with a USB port.

- 1** Prepare a docking station.  
Multiple types of ports are available on a docking station. If your external display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.
- 2** Connect your device and the external display through the docking station, then connect the wired mouse and keyboard to the docking station.
- 3** On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

## Desktop Mode

For enhanced work efficiency, project your device's content onto an external display, swipe down from the status bar to open the notification panel, then enable **DESKTOP MODE**.

In **DESKTOP MODE**, the display of your device will be arranged in a desktop layout, and operations on your device won't affect what's on the external display. For example, you can edit a document on the external display while chatting on your device. You don't need to

worry about missing notifications, calls, or messages, as a red dot will appear on the notification panel on the external display to keep you informed.

### Use Your Device as a Touchpad

Swipe down from the status bar to open the notification panel, then touch **TOUCHPAD**. You can now do the following:

- Use gestures as instructed to simulate mouse commands.
- When no external keyboard is connected, click the text input box on the external display to bring out the onscreen keyboard to input text.  
If an external keyboard is connected, the onscreen keyboard will not be available. In this case, you need to use the external keyboard to input text.

### Project Your Device to an External Display to Facilitate Your Work

In **DESKTOP MODE**, you can use the following features:

- Multiple windows: Open more than one window at a time to multitask.
- File management: Save files to the desktop, create files or folders, and rename or delete files.
- Quick search: Search for documents, multimedia files, and apps using the start menu search box.
- Create app shortcuts: From the start menu, touch and hold an app and then drag it to the desktop to create a shortcut. You can also right-click an app icon and select the option to create an app shortcut on the desktop.
- Audio output: Touch the audio output icon on the status bar, then select the external display or your Device as the audio output device.
- App projection: Touch and hold an app icon on your device to view the projection options. You can now project and open the app on the external display.
- Highlighter: Use the highlighter feature to mark projected content using the touchpad.

### Exit Desktop Mode

Swipe down from the status bar to open the notification panel, then touch **PHONE MODE**.

## Huawei Share OneHop

### Use Huawei Share OneHop to Transfer Files

You can quickly transfer files between your device and laptop with just one touch without the hassle of using cables and third-party apps.

Currently, Huawei Share OneHop is supported on Huawei or Honor laptops with the Huawei

Share icon  or Magic-link icon  and installed with version 9.1 or later of PC Manager.



## Connect Your Device and Laptop with a Tap

- 1 Open PC Manager on your laptop, and agree to the *End User Licence Agreement* (EULA).
- 2 Swipe down from the status bar to open the notification panel, then swipe down further to display all shortcut switches. Then enable **NFC**, **Wi-Fi** and **Bluetooth**.
- 3 Hold the NFC area (around the rear camera of your device) against the Huawei Share icon (or Magic-link icon) on your laptop until your device vibrates or plays a notification sound.
- 4 Follow the onscreen instructions on your device and laptop to complete the connection.

## Share Pictures and Videos with One Tap

### • Share pictures and videos from your device to your laptop:


- 1 Select one or more pictures or videos from Gallery on your device.
- 2 Tap the NFC area of your device against the Huawei Share (or Magic-link) icon on the laptop and hold it there until your device makes a sound or vibrates. The selected pictures or videos will be transferred to your laptop.

If you want to identify, copy, or save text in the received picture on the laptop, click the

picture to display the image viewer, then click  to identify text and generate a text file.


### • Share pictures from your laptop to your device:


- 1 Right-click an individual picture file on your laptop, and open it with Huawei Image viewer.
- 2 If you exit Gallery or return to the home screen on your device, the picture open on your laptop will be transferred to your device when you tap it against your laptop (as instructed above).

-  This feature is also supported by HUAWEI MateBooks or HONOR MagicBooks running PC Manager 9.0 and with the Huawei Share or Magic-link icon.

## Record Your Laptop Screen

Ever wanted to show off your gaming skills or share video clips from your laptop, but never found a convenient way to do so? Huawei Share OneHop enables an instant connection between your device and laptop, letting you record your laptop screen on your device with a single tap.

- 1 Shake your device, then immediately hold its NFC area against the Huawei Share label or Magic-link label on the laptop until your device vibrates or plays a notification sound. The laptop screen will then be projected to your device and the recording will start. You can record for a maximum of 60 seconds.
- 2 Touch  on your device to stop the recording. The screen recording will be saved to Gallery.

-  The Huawei Share OneHop feature is currently supported on Intel laptops only.

## Share Files

### • From device to laptop

- 1 Use Microsoft Office to open a file you want to share on your device.
  - 2 Hold the NFC area of your device against the Huawei Share icon (or Magic-link icon) on your laptop until your device vibrates or plays a notification sound.
- **From laptop to device**
    - 1 Open a file you want to share using Microsoft Office on your laptop.
    - 2 Exit Microsoft Office or return to the home screen on your device, then tap your device against the laptop (as instructed above). You can then transfer the file open in Microsoft Office on your laptop to your device.

### Copy Clipboard Text

- 1 Open PC Manager on the laptop, select **My Phone**, click **Enable**, then follow the onscreen instructions to allow the laptop to access data on your device.
- 2 You can then copy and paste text on the clipboard to your device or laptop.
- 3 Touch the PC Manager icon in the lower right corner of the laptop desktop, and select **Clipboard** to view the recently copied text.



## Huawei Share

### Huawei Share

Huawei Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology uses Bluetooth to discover nearby devices that supports Huawei Share and Wi-Fi Direct to transfer files without using mobile data.

### Enable or Disable Huawei Share

You can enable or disable Huawei Share in either of the following ways:



- Swipe down from the status bar to open the notification panel, then touch  to enable or disable **Huawei Share**. Touch and hold the toggle to enter the **Huawei Share** settings screen.
- Go to  **Settings** > **More connections** > **Huawei Share**, and enable or disable **Huawei Share**.

Enabling Huawei Share automatically turns on Wi-Fi and Bluetooth.

### Quickly Share Files Between Your Devices with Huawei Share


You can use Huawei Share to quickly share files between Huawei devices. The recipient can preview the files before they are sent, then view the full content of the files once they have been received. For example, the recipient can view received pictures or videos in Gallery.

- 1 On the receiving device, enable **Huawei Share**.

- 2 On the sending device, touch and hold to select the files you want to share, then touch . Touch **Huawei Share**, then touch the icon of the receiving device to send the files.
  -  These steps may be different if you are sharing files directly from an app.


- 3 On the receiving device, touch **Accept** to accept the transfer.

To view the received files, go to **Files**, then go to **Internal storage > Huawei Share** on the **Categories** tab.

Received pictures or videos can also be found in  **Gallery > Albums > Huawei Share**.

### Share Files Between Your Device and Computer with Huawei Share


You can use Huawei Share to quickly and easily share files wirelessly between your device and a computer (Windows or macOS).

- 1 Make sure your device and computer are connected to the same Wi-Fi network.
- 2 On your device, go to the **Huawei Share** settings screen and enable **Huawei Share** and **Computer share**.
- 3 Make a note of the name displayed next to **Name shown on computers** and the user name and password under **Verification on computers**.
- 4 On the computer, go to:
  - Windows: **This PC (Computer) > Network**.
  - macOS: **Finder > Go to > Network**.
    -  Currently, this feature is only available on Macs running macOS 10.8 to 10.14.
- 5 On your computer, double-click the name of your device and enter the user name and password noted down previously.
- 6 Open a shared folder on your device, such as the Internal storage or Album folder to view, edit, or copy files from your device to your computer or vice versa. Changes made to files in the shared folders on your computer will be automatically synced to your device and vice versa.

### One-Touch Printing with Huawei Share

When a printer that supports Huawei Share is nearby, you can use Huawei Share to find the printer and print out pictures or PDF files stored on your device.

- 1 Depending on the type of printer, ensure the following:
  - Wi-Fi capable printers: The printer must be powered on and connected to the same network as your device.
  - Wi-Fi Direct capable printers: The printer must be powered on and have Wi-Fi Direct enabled.
  - Bluetooth capable printers: The printer must be powered on and discoverable via Bluetooth.
- 2 On your device, preview the file to be printed, then go to **Share > Huawei Share**.




- 3 Once the printer has been discovered, touch its name on your device, and adjust the settings on the preview screen. Then, touch **PRINT** to print.  
If you are connecting a Bluetooth printer to your device for the first time, find the printer on your device, touch the printer name, then press and hold the Power button on the printer for about 1 second to confirm the connection.
-  For a list of supported printers, touch **Learn more** on the Huawei Share sharing screen, swipe left on the screen, then touch **What printers are supported?**.

## Smart Remote




### Smart Remote

Your device uses infrared technology, allowing you to pair it with household appliances in the Smart Remote app and use it to remotely control appliances such as TVs, air conditioners, STBs, DVD players, cameras, projectors, and network boxes.



#### Add and Use a Remote Control

- 1 Go to  **Smart Remote** > , select the device type (such as TV, air conditioner, STB, DVD player, camera, projector, or network box), and then the brand.
- 2 Point the infrared sensor on the top of your device at the household appliance, and follow the onscreen instructions to add it to your remote control.
- 3 After adding the appliance, simply touch  to control it remotely.

#### Set Up a Remote Control

- 1 Go to  **Smart Remote** >  and touch .
- 2 Swipe through the remote control panels to select the one you want, and touch **Go to remote control panel**.
- 3 Point the infrared sensor on the top of the device at the infrared sensor of a home remote, keeping it at a distance of about 5 cm. Touch and hold a key on the device you want to program for 2 seconds to start learning the operation. Hold your device and the home remote steady during the process.

#### Enable or Disable Remote Control Keypad Touch Sounds

Go to  **Smart Remote** >  > **Settings** to enable or disable keypad touch sounds and/or vibration.


# Camera and Gallery

## Launch Camera

### Launch Camera

There are multiple ways to open the Camera app.

#### From the Home Screen



From the home screen, open  **Camera**.

#### From the Lock Screen

When the screen is locked, turn on the screen, then swipe up on the camera icon in the lower right corner to open the camera.

#### Using Ultra Snapshot


When enabled, simply double-press the Volume down button to open the camera when the screen is off.

- 1 Open  **Camera**.
- 2 Go to  > **Ultra snapshot** and select **Open Camera** or **Take a snapshot**.
- 3 You can now open the camera or take a snapshot without unlocking your screen.


## Take Photos with Your Foldable Device

### Take Photos with Your Foldable Device


Your foldable device uses the same cameras as both front and rear cameras. Just fold your device and flip it depending on whether you want to take a photo or a selfie. The dual screen design also allows both the photographer and their subject to preview shots in real time from both sides simultaneously.

Open  **Camera**. You can use the camera in the following ways:

- When your device is unfolded, you can shoot photos or videos using the entire screen as the viewfinder.
- When your device is folded, the viewfinder is displayed on the primary screen by default.


Touch  to display the viewfinder on both the primary and secondary screens.

 This feature may not be available in some camera modes.







To take a selfie, touch  to switch to the front camera, flip your device so that the cameras are facing you, then take a photo.

## Take Photos

### Take Photos

1 Open  **Camera**.

2 You can then:

- **Focus:** Touch where you want to focus.  
To adjust focus and metering separately, touch and hold the viewfinder and drag the individual ring or frame to the desired location.
- **Adjust brightness:** Touch the viewfinder. When the  symbol appears next to the focus frame, drag it up or down.
- **Zoom in or out:** On the viewfinder, pinch or spread two fingers, or drag the zoom slider.
- **Select a camera mode:** Swipe left or right across the camera mode options.
- **Turn the flash on or off:** Touch  and select  (Auto),  (On),  (Off), or  (Always on).


Some features are only available when using the rear camera.

3 Touch  to take a photo.

### Take Timed Photos

The camera timer allows you to set a time delay so you can get into position after you have touched the shutter button.


1 Open  **Camera**.

2 Go to  > **Timer** and select a delay option.

3 Return to the viewfinder and touch the shutter button. Your device will take a photo when the countdown ends.

### Use Audio Control to Take Photos

You can use your voice to take photos without having to touch the shutter button.

1 Open  **Camera**.

2 Go to  > **Audio control**, enable **Audio control**, and select an audio control option.






3 Go back to the viewfinder, then say your command to take a photo.

## Shoot in Portrait, Night, and Wide Aperture Modes

## Shoot in Portrait, Night, and Wide Aperture Modes

### Use Portrait Mode to Shoot Portraits



Portrait mode lets you apply beauty and lighting effects to your photos to shoot stunning portraits.

- 1 Open  **Camera** and select **Portrait** mode.
- 2 Frame your subject within the viewfinder.  
To take a selfie, touch .
- 3 You can then:
  - Enable beauty effect: Touch  and drag the slider to adjust beauty settings. A larger value will produce a more pronounced beauty effect.  
To disable the beauty effect, drag the setting to its lowest value.
  - Set lighting effect: Touch  and select an effect to your liking.
- 4 Touch  to take a photo.

### Take Night Shots


Night mode solves the issues caused by low light and night shooting to give your photos sharper details and brighter colours.


You can also use Night mode when shooting backlit subjects and scenes with flowing water, such as waterfalls, to create a better contrast or a smooth, silky water effect.

- 1 Open  **Camera** and select **Night** mode.
- 2 If you are using the rear camera, touch **ISO** on the viewfinder to adjust the ISO sensitivity or **S** to adjust the shutter speed.
- 3 Keep your device steady and touch .
- 4 Your device will adjust the exposure time based on the ambient brightness. Keep your device steady.  
Do not stop shooting before the countdown finishes or your photos may come out blurry.

### Shoot Wide Aperture Photos and Videos





Wide aperture mode allows you to shoot photos and videos where the background is blurred while your subject remains in sharp focus.

- 1 Open  **Camera** and select **Aperture** mode.
- 2 Touch where you want to focus. For best results, your device needs to be within 2 meters (about 7 ft.) of your subject.

- 3 Touch  in the viewfinder and drag the slider to adjust aperture settings. A smaller aperture value will create a more blurred background.
- 4 Touch the shutter button to shoot a photo or video. When recording, touch the viewfinder to adjust the focus.

### Edit Background Blur in Wide Aperture Photos

You can adjust the focus and background blur after you've taken a wide aperture photo.





- 1 Go to  **Gallery** > **Albums** > **Camera**.
- 2 Touch a photo tagged with , then touch  at the top of the photo.
- 3 Follow the instructions to touch the photo to re-focus. Drag the slider at the bottom to adjust the aperture.
- 4 Touch  to save the settings.

## Master AI




### Master AI

Master AI is a pre-installed camera feature that helps you take better photos by intelligently identifying objects and scenes and optimising the camera settings accordingly.

Master AI is able to identify a variety of scenes, such as stages, beaches, blue skies, greenery, and text. It only works with the rear camera.

- 1 Open  **Camera** and select **Photo** mode.
- 2 Touch  to ensure that Master AI is enabled.
- 3 Frame the subject in the viewfinder. Once Master AI identifies what you are shooting, it will automatically recommend a mode (such as portrait, greenery, or text).
- 4 To disable the recommended mode, touch  next to the mode text or touch  to disable Master AI.

### Use Moon Mode

- 1 Open  **Camera** and select **Photo** mode.
- 2 Touch  to ensure that Master AI is enabled.
- 3 Aim the camera at the moon and spread your fingers on the viewfinder to adjust the zoom to 10x or more.  
When your device detects the moon, it will automatically enter **Moon** mode.
- 4 Touch  to take a photo.






- i** **Moon** mode can only identify the moon if it is at least half full. **Moon** mode may not be triggered if the moon is shrouded by clouds.

## Zoom to Take Photos



### Take Photos with Various Zoom Settings

The zoom capabilities of your device's camera allow you to capture more of a scene, or distant vistas.

#### Take Wide-Angle Photos

- 1 Open  **Camera** and select **Photo** mode.
  - 2 Touch  to ensure that Master AI is enabled.
  - 3 Aim the camera at the object you want to take a photo of. The camera will automatically recommend **Wide** mode if it detects a building. Touch **Wide** to have a wider angle of view.  
You can also drag the zoom slider in the viewfinder, or pinch in or out to adjust the zoom level. A smaller value will result in a wider angle of view.
  - 4 Touch  to take a photo.
- i** You will not be able to adjust the zoom when the resolution is set to the maximum value. The camera will automatically switch the resolution.


#### Take Photos from Far Away


- 1 Open  **Camera** and select **Photo** mode.
- 2 Aim the camera at the distant object you want to take a photo of. Drag the zoom slider, or pinch in or out to adjust the zoom level.  
You will not be able to adjust the zoom when the resolution is set to the maximum value. The camera will automatically switch the resolution.
- 3 In the viewfinder, touch where you want to focus. When the camera is in focus, touch .

## Super Macro

### Super Macro

Super macro mode makes it easier to shoot close-ups of small objects, such as dew drops and leaves, as well as other everyday objects, to bring out details easily missed by the naked eye.

- 1 Open  **Camera**, then enter Super macro mode using either of the following methods:

- **Automatic:** Move your camera close to the subject and hold your device steady. When your camera is close enough, it will automatically focus. If  is enabled, the screen will display **Super macro**.  
If it is not displayed, keep a distance of 2.5–10.0 cm (about 1.0–3.9 in) from the subject.
- **Manual:** In the viewfinder, drag the zoom slider to lower than 1x, or go to **Camera > More** to switch to **Super macro**.





2 Touch  to take a photo.

## Take Panoramic Photos

### Take Panoramic Photos

Add breadth to your landscape or group photos with the Panorama feature. The camera takes multiple photos of objects within your field of view and stitches them together into a single panoramic photo.


#### Use the Rear Camera to Take Panoramic Photos

- 1 Go to  **Camera > More** and select **Panorama** mode.
- 2 Touch  at the bottom of the viewfinder to set the pan direction.
- 3 Point the camera at your starting point, then touch  to start shooting.
- 4 Slowly move the camera in the direction of the arrow displayed on the screen. Keep your device steady and the arrow on the centre line the entire time.
- 5 Touch  when you are finished.

## Take Black and White Photos

### Take Black and White Photos

Black and white photography removes distracting colours to help you focus more on form, shape, and texture.

- 1 Open  **Camera**.
- 2 Go to **More > Monochrome** and select one of the following modes based on your subject and scene:
  - **Normal:** This mode suits all kinds of subjects.
  - **Aperture:** This mode blurs the background and lends greater emphasis to the subject.
  - **Portrait:** This mode blurs the background and lets you adjust the beauty effect.

- **Pro:** This mode allows you to adjust the camera settings, including the metering mode, sensitivity, and shutter speed.

**3** Touch  to take a photo.

## Light Painting

 


### Light Painting

Light painting helps you capture light trails by allowing the shutter to stay open for a longer time. No manual aperture and shutter adjustment is involved.

Just choose from the available options depending on the subjects and light conditions. To reduce camera shake, a tripod is recommended to steady your device.

 


#### Capture Car Light Trails in Traffic Trails Mode

Traffic trails mode lets you create artistic photos of car tail lights at night.

- 1** Go to  **Camera > More > Light painting > Traffic trails.**
- 2** Find a spot where you'll see the light trails created by cars from a distance. Ensure that car headlights do not point directly at the camera, as this can overexpose the image.
- 3** Touch  to start shooting. Observe the shot in the viewfinder. When the exposure is just right, touch  to finish shooting.


#### Capture Light Drawings in Light Graffiti Mode



Light graffiti lets you create patterns or write words by moving a light source in front of the camera.

- 1** Go to  **Camera > More > Light painting > Light graffiti.**
- 2** In a dark environment without distracting light sources, move a suitably bright light source of an appropriate colour, such as a small torch or glow stick, in front of the camera. Avoid exaggerated body movement as this may affect the shooting results.
- 3** Touch  to start shooting. Observe the shot in the viewfinder. When the exposure is just right, touch  to finish shooting.

#### Capture Rivers and Waterfalls in Silky Water Mode




Silky water lets you capture silky smooth photographs of waterfalls and rivers.

- 1** Go to  **Camera > More > Light painting > Silky water.**
- 2** This feature works best when taking photos of a stream or waterfall where the water is flowing heavily.

- 3** Touch  to start shooting. Observe the shot in the viewfinder. When the exposure is just right, touch  to finish shooting.

### Capture the Beauty of the Stars in Star Track Mode

Star track lets you use your camera to capture the movement of the stars in the night sky.



- 1** Go to  **Camera > More > Light painting > Star trails.**
- 2** For best results, choose a clear night in a location free of light pollution and with an unobstructed view of the sky.
- 3** Touch  to start shooting. Observe the shot in the viewfinder. When the exposure is just right, touch  to finish shooting.

## Take HDR Photos

### Take HDR Photos

When shooting photos with backlighting or a high light contrast, High Dynamic Range (HDR) mode can help you improve light and shadow effects in your photos, giving your photos sharper details.

#### Use HDR with the Rear Camera

- 1** Go to  **Camera > More** and select **HDR**.
- 2** Steady your device, with the help of a tripod if necessary.
- 3** Touch  to take a photo.

## Moving Pictures

### Moving Pictures



Moving pictures capture a second of movement and sound before you touch the shutter button, and a second after.

#### Take Moving Pictures

Go to  **Camera > More > Moving picture** and touch  to take a photo.

#### Play Moving Pictures

Moving pictures are saved in JPG format in **Gallery**.





Go to  **Gallery > Albums > Camera**, touch a moving picture, then touch  at the top of the picture to view it.

The moving picture will automatically stop after a complete playback. You can also touch the screen to stop the playback.

## Add Stickers to Photos

### Add Stickers to Photos

Add a watermark, such as time, location, weather, or mood, to spice up your photo.

- 1 Go to  **Camera > More > Stickers**.  
If this mode is not there, touch  and then download **Stickers**.
- 2 Touch  and select a watermark. The selected watermark will be displayed in the viewfinder.
- 3 Drag the watermark to change its position. You can also edit the text of some types of watermarks.
- 4 Touch  to take a photo.




## Documents Mode

### Documents Mode

Images shot at an angle always suffer from the problem of perspective. If you aren't able to take a perfectly straight photo of a document, use Documents mode.

The camera will automatically adjust skewed images shot in Documents mode.



### Shoot Photos in Documents Mode


- 1 Go to  **Camera > More**, then touch **Documents**.  
If the option is not present, touch , then download **Documents**.
- 2 Frame the document you want to shoot within the viewfinder, then touch .
- 3 The camera will automatically identify the text area within the viewfinder and unskew the image.

### Adjust the Text Area

If you find the skew correction provided by Documents mode unsatisfactory, you can also manually adjust the text area.

This is only available for photos taken in **Documents** mode.

- 1 Go to  **Gallery > Albums > Camera**, then touch the photo you wish to adjust.
- 2 Touch  above the photo.

 

- 3 Drag the four corners to customise the correction area. Then touch .

## Pro Mode




### Pro Mode

Pro mode lets you fine-tune photos and videos and gives you full control over metering, ISO sensitivity, exposure, and more when shooting.

Some of the above settings are not available when you shoot videos in Pro mode.

- 1 Open  **Camera** and select **Pro** mode.
- 2 Customise camera settings to shoot unique and professional-looking photos. You can also shoot high-quality videos by touching .

- Adjust the metering mode: Touch **M** and select a metering mode.


Metering Mode	Description
 <b>Matrix</b>	Measures the light in the whole frame. Applicable when shooting natural landscapes.
 <b>Centre</b>	Places more emphasis on light levels at the centre of the screen. Applicable when shooting portraits.
 <b>Spot</b>	Concentrates on the light in a small area of the screen, such as the subject's eyes.




- Adjust the ISO sensitivity: Touch **ISO** and drag the slider. In low-light conditions, increase the ISO sensitivity. In well-lit environments, lower the ISO sensitivity to avoid image noise.
- Adjust the shutter speed: Touch **S** and drag the slider. When you are shooting stationary scenes or portraits, lower the shutter speed. When you are shooting moving scenes or objects, increase the shutter speed.
- Adjust EV exposure compensation: Touch **EV** and drag the slider. Increase the EV value in low-light conditions and lower the value in well-lit environments.
- Adjust the focus: Touch **AF** and drag the slider.

Focus Mode	Applicable Scenario
<b>AF-S (single)</b>	Stationary subjects
<b>AF-C (continuous)</b>	Moving subjects
<b>MF (manual)</b>	Touch the subject on which you want to focus.

- Adjust the colour cast: Touch **WB** and select a mode.

When shooting in bright sunlight, select . In low-light environments, select .








Touch  to adjust the colour temperature.

- Use Horizontal level: Touch  and enable **Horizontal level**.  
A horizontal guiding line will appear on the viewfinder. When the dotted line overlaps with the solid line, the camera is parallel with the horizontal level, avoiding skewed edges.
- Use AF auxiliary light: Touch  and enable **AF auxiliary light** for better focus in low-light environments.
- Save RAW format photos: RAW format records more detail and allows you to have a wider range of post-processing options. Go to  > **Resolution** and enable **RAW format**.  
Now when you take a photo, it will be saved in RAW and standard formats. The RAW format photos will be saved to the RAW photo album in **Gallery**.  
RAW format photos take up more storage space than standard format photos. Make sure that your device has sufficient storage space.


**3** Touch the shutter button to shoot a photo or video.

## Record Videos

### Record Videos

- 1** Open  **Camera** and select **Video** mode.
- 2** Adjust the following settings:
  - Zoom in or out: On the viewfinder, pinch or spread two fingers, or drag the zoom slider.
  - Focus: Touch the location you want to focus on. Touch and hold the viewfinder to lock the exposure and focus.
  - Turn the flash on or off: Touch , then touch  to keep the flash on, or  to turn it off.
  - Adjust the beauty effect: Touch  and drag the slider to adjust beauty settings.
  - Adjust the video resolution and frame rate: Go to  > **Resolution** and select the desired resolution.  
Then touch **Frame rate** and **Encoding** to set the frame rate and encoding format.  
A higher resolution will result in a higher quality video with a larger file size.
- 3** Touch  to start recording.

While recording, touch and hold  or  to smoothly zoom in or out.







Touch  to take a photo while recording.

4 Touch  to pause and  to end the recording.

## AI Movie Effects





### AI Movie Effects

Use AI movie effects to add unique artistic effects to your videos without the need for post-processing.

- 1 Open  **Camera** and select **Video** mode.
- 2 Switch to the rear camera, touch , and select a special effect.
- 3 Go to  > **Resolution** and select 21:9 to give your video a cinematic character.
- 4 Touch  to start recording.  
While recording, touch  to take a photo with the selected special effect.
- 5 Touch  to end the recording.

## 4K HD Videos

### 4K HD Videos

- 1 Open  **Camera** and select **Video** mode.
- 2 Go to  > **Resolution** and select **(16:9) 4K**.
- 3 Return to the **Video** screen, and touch  to record a video.  
 A higher resolution will result in a higher quality video, but will also take up more storage space.

## Slow-Mo Recording




### Slow-Mo Recording



Use Slow-mo mode to capture fleeting moments in detail. Adjust the slow motion speed based on how slow you want your footage to appear.







- 32x super slow-mo: When the camera detects a moving object in the viewfinder, it will record an epic, super slow motion video. This mode is suitable for shooting super high speed motions, such as bubble popping and water splashing.
- 4x or 8x slow-mo: You can customise the overall shooting length and the length of the slow-mo portion. This mode is suitable for shooting breakdowns of fast movements, such as diving and kicking a football.

### Shoot Slow-Mo Videos at 32x

- 1 Go to  **Camera** > **More**, then touch **Slow-mo**.
- 2 Ensure that the speed is **32X** and motion detection is enabled ( should display at the top of the screen).
- 3 Frame your subject in the viewfinder, then touch  to start recording. When the camera detects a moving object in the viewfinder, it will record an epic, super slow motion video.

To record a video manually, touch  to disable motion detection, then touch  to start recording.





### Shoot Slow-Mo Videos

- 1 Go to  **Camera** > **More**, then touch **Slow-mo**.
- 2 Touch  and select a speed.
- 3 Touch  to start recording.
- 4 Touch  to end the recording.

### Adjust the Slow-Mo Portion in Slow-Mo Videos

The length of the slow-mo portion in slow motion videos can be adjusted.






 This feature is only available for slow motion videos recorded at 4x or 8x.

- 1 Go to  **Gallery** > **Albums** > **Camera** and select a slow motion video.
- 2 Touch  to play the video. During playback, touch the video to bring up the editing area.
- 3 Drag the slider to adjust the portion you want to be played back in slow motion.
- 4 Touch  to adjust the volume of the background music and the brightness.
- 5 When you are finished, go to  > **Save slow-mo file** to save your edits.

## Time-Lapse Photography

## Time-Lapse Photography




You can use Time-lapse to capture images slowly over several minutes or even hours, then condense them into a short video. This allows you to capture the beauty of change – blooming flowers, drifting clouds, and more.

- 1 Go to  **Camera** > **More**, then touch **Time-lapse**.
- 2 Place your device in position. To reduce camera shake, use a tripod to steady your device.
- 3 By default, Auto mode is enabled. To manually adjust camera settings, touch **Auto**. Then you can:
  - Touch  to adjust the recording speed. For example, record traffic trails at 15x or blooming flowers at 1800x.  
A video recorded at a higher speed will play faster.
  - Touch  to set the recording duration.
  - Touch **PRO** to adjust the metering mode, shutter speed, ISO, and more.
- 4 Touch  to start recording. If no recording duration is set, touch  to end the recording.

The recorded video is automatically saved to Gallery.






## Leica Colors

### Leica Colours

- 1 Open  **Camera** and switch to the rear camera.
  - 2 Touch  at the top of the viewfinder, then select **Leica standard**, **Leica vivid**, or **Leica smooth**.
  - 3 Touch the shutter button to shoot a photo or video.
-  Not all camera modes support Leica colours.

## Filters

### Filters

- 1 Open  **Camera** and select **Photo** or **Video** mode.
  - 2 Touch  or  and select a filter.
-  Some devices do not have the  icon.



- 3 Touch the shutter button to shoot a photo or video.

## Edit Camera Modes


### Edit Camera Modes

Your device allows you to download, update, and delete camera modes to better suit your needs.






#### Download Camera Modes

- 1 Go to  **Camera > More**.
- 2 Touch , then touch **ADD** next to the mode you want to download. When the download is complete, the new mode will be displayed in **More**.

#### Update Camera Modes

- 1 On the **More** screen, touch .
- 2 When an update is available, follow the onscreen instructions to update the relevant mode.


#### Delete Camera Modes

- 1 On the **More** screen, touch  to display the editing screen.
  - 2 Touch  in the upper right corner of the mode you want to delete, then touch  to save your settings. If  is not displayed, the mode cannot be deleted.
-  To ensure that the camera runs correctly, pre-installed camera modes cannot be deleted.




## Adjust Camera Settings

### Adjust Camera Settings

You can adjust the camera settings to take photos and videos more quickly.

-  The following features may not be available in some camera modes.

#### Adjust the Camera Resolution

- 1 Open  **Camera** and touch  to access the **Settings** screen.
  - 2 Touch **Resolution** and select a resolution.
-  This feature is not available in some modes.

## Enable Location Tag

Enable **Location tag** to tag your location in photos and videos.



Swipe up on a photo or video in Gallery to view its shooting location.

## Add Device Watermarks to Photos

Enable **Add watermark**. Photos and videos shot with the rear camera will have a device watermark added.

## Use the Assistive Grid to Compose Your Photos

Use the assistive grid to help you line up the perfect shot.

- 1 Go to  **Camera** > .
- 2 Enable **Assistive grid**.
- 3 Grid lines will appear in the viewfinder. Place the subject of your photo at one of the intersecting points, then touch the shutter button.

## Enable Mirror Reflection

When using the front camera, touch  to enable or disable **Mirror reflection**.

## Mute the Shutter Sound

Enable **Mute** as needed.

## Capture Smiles

Enable **Capture smiles**. The camera will take a photo automatically when it detects a smile in the viewfinder.

# Manage Gallery

## View Photos and Videos

You can view photos and videos by album on the **Albums** tab.


Some photos and videos are stored in default albums. For example, videos recorded with the camera are saved in the **Camera** album. Screenshots and screen recordings are saved in the **Screenshots** album.

## View by Category

Gallery intelligently sorts photos into categories, allowing you to quickly sift through large albums by category.



Touch a category album on the **Discover** tab (such as food, portrait, or scenery) to view photos in that album.

## View Details About Photos and Videos

- 1 Touch a photo or video to view it in Full screen mode. Touch the screen again to hide the menu.
- 2 In Full screen mode, you can check the following:
  - Basic information: Swipe up on the photo or video to view basic information.
  - Shooting details: Touch  and view shooting details in the popup box, including the storage path, resolution, and size.

## Search for Photos


Quickly locate a photo by searching with keywords in Gallery.









- 1 Open  **Gallery**, then touch  at the top of the screen.
- 2 Enter a keyword (such as "food", "scenery", or "flower").
- 3 Photos related to that keyword will be displayed. Touch a suggested keyword or enter more keywords for more precise results.

## Edit Photos and Videos



Gallery offers a wide range of editing features for photos and videos.

### Basic Editing



Open  **Gallery**, touch the thumbnail of the photo you want to edit, then touch **Edit** to access the editing features.

- Rotate: Touch  and drag the angle wheel to the desired orientation. You can also touch **Rotate** to rotate your photo 90 degrees or **Mirror** to flip it.
- Crop: Touch  and drag the grid or its corners to make your selection. You can also select a fixed ratio and drag the corners of the grid to crop the photo.
- Add filter effects: Touch  to select a filter.
- Colour splash: Touch  to select the colours you want to highlight. Other parts of the photo will be black and white.
- Blur: Touch , select a blur mode, and drag the slider to adjust the blur.
- Adjust photo effects: Touch  to adjust the brightness, contrast, saturation, and other qualities of the photo.
- Graffiti: Touch  to select a brush and colour to add graffiti.
- Add a text element: Touch  to select an element style and font format.


## Add Stickers to Photos

- 1 Go to **Edit** > **Stickers**.
- 2 Select a type of sticker, such as **Time**, **Location**, **Weather**, or **Mood**.
- 3 Select a sticker and drag it to change its position. You can also edit the text of some types of stickers.
- 4 Touch  to save your edits and touch  to save the photo.











## Pixelate Photos


- 1 Go to **Edit** > **Mosaic**.
- 2 Select a mosaic style and size to cover parts of the photo.
- 3 To remove the mosaic, touch **Eraser** and wipe it off the photo.
- 4 Touch  to save your edits and touch  to save the photo.


## Rename Photos

- 1 In **Gallery**, touch the photo thumbnail you want to rename.
- 2 Go to  > **Rename** and enter a new name.
- 3 Touch **OK**.

## Edit Videos




- 1 Go to  **Gallery** > **Albums** > **Videos** and touch the video you want to edit.
- 2 Touch . Then you can:
  - Select a video template: Touch .
  - Crop the video: Touch , then drag the slider at both ends of the video clip to select which part you want to keep. Touch  to preview the cropped video.
  - Adjust the frame and video resolution: Touch , then touch **Frame** to select a frame, and **Resolution** to select a video resolution.
    -  A higher resolution will result in a higher quality video, but will also take up more storage space.
  - Edit background music: Touch  and choose from preset background music or your locally saved music.
    - To turn off the original video sounds, touch .
  - Add filter effects: Touch  to select a filter. Drag the slider to adjust the filter effect.

- Edit the intro and outro: Touch  to select an intro and outro. After the preview is complete, touch the screen to edit the text content and style of the intro.

- 3 When you are finished, touch  to export the video. The edited videos are saved in the **Video Editor** album, and the original video is left unchanged.

## Share Photos and Videos


There are several ways to share photos and videos from Gallery.

- 1 Open  **Gallery**.
- 2 Use either of the following methods:
  - Share a single photo or video: Touch the photo or video, then touch .
  - Share multiple photos or videos: In an album, touch and hold to select multiple photos and videos, then touch .



## Manage Gallery

Organise photos and videos into albums to easily sift through them.


### Add Albums

- 1 Open  **Gallery**, then touch **Albums**.
- 2 Touch **Add album**, then name the album.
- 3 Touch **OK**.
- 4 Select the photos or videos you want to add.

### Move Photos and Videos

- 1 Open an album, then touch and hold to select the photos and videos you want to move.
  - 2 Touch  > **Move** to select the desired album.
  - 3 Once the items are moved, they will no longer be in their original album.
-  The **All photos** and **Videos** albums show all photos and videos stored on your device. Moving items across albums will not affect the view in these albums.


### Delete Photos and Videos

Touch and hold to select the items you want to delete, then go to  > **Delete**.

-  The **All photos**, **Videos**, and **Camera** albums cannot be deleted.


Deleted photos and videos will be temporarily moved to the **Recently deleted** album before being permanently deleted after 30 days.

To permanently delete a photo or video manually, touch and hold its thumbnail in the

**Recently deleted** album, then go to  > **Delete**.

### Recover Deleted Photos and Videos

In the **Recently deleted** album, touch and hold to select the items you want to recover, then

touch  to restore them to their original albums.


If the original album has been deleted, a new one will be created.

### Add Photos and Videos to Favorites

Open a photo or video, then touch .

The item will appear in both its original album and the **My favourites** album.

### Hide Albums

 System albums such as **Camera**, **Videos**, **My favourites**, and **Screenshots** cannot be hidden.



From the **Albums** tab, go to  > **Hide albums** and toggle the switches on for albums that you want to hide.

Hidden albums and the photos and videos in them are hidden from view in Gallery.

### Block Albums

To prevent third-party app albums from displaying in Gallery, block these albums.

**1** On the **Albums** tab, touch **Others**.

**2** Touch an album, and if  is displayed at the top, go to  > **Block**.  
Move photos and videos you want to block to blocked albums.  
Blocked albums cannot be viewed in any apps other than Files.

**3** To unblock an album, go to **Others**, touch **View blocked albums**, then touch **Unblock** next to the album.

 Only some albums in **Others** can be blocked.



## Smart Photo Categorisation

### Smart Photo Categorisation

Gallery automatically sorts your photos into categories such as portraits, locations, scenery, and food, so you can quickly find what you're looking for.

Open  **Gallery**, then touch the **Discover** tab to view your photos organised into categories.



To remove a photo from an album, touch and hold to select the photo, then touch  (or  for portraits).


 Not all photos can be removed from the category albums.

## View and Set People Albums

Once you have taken a sufficient number of photos, Gallery will automatically create People albums of individuals or groups by identifying faces in your photos. This will happen when your device is charging and the screen is off.

You can name your People albums and set the relationship of individuals with you.

Group photo albums require a specific number of photos that contain 2 to 10 faces that have already been named in People albums.

**1** Go to  **Gallery** > **Discover** and view the generated People albums.

**2** Touch an album, go to  > **Edit** > **Add name**, then set the name and relationship (such as Baby or Mom).

Once you have finished, you can find a People album by entering the name or relationship in the search bar.

## Huawei Vlog Editor

### Huawei Vlog Editor


The Huawei Vlog editor automatically creates Huawei Vlogs, such as Spotlight Reels, Highlights videos, and People albums, with added background music from your photos and videos.



You can also select photos and videos yourself to create your own Huawei Vlogs.


Either way, you can edit and share your Huawei Vlogs at the touch of a finger.




### Create a Video Clip with Photos and Videos


**1** Go to  **Gallery** > **Photos**.

**2** Touch and hold to select photos and videos, then go to  > **Video** to create a video clip. You can then:

- Select a video template: Touch .
- Edit video materials: Touch  to adjust the video frame or length, or add or delete video materials.


If you have selected a video, you can also touch  on the video timeline, and then drag the sliders at both ends to trim the video.


- Edit background music: Touch  and choose from preset background music or music files on your device.
- Add filter effects: Touch  to select a filter. Drag the slider to adjust the filter effect.
- Edit the intro and outro: Touch  to select an intro and outro. After the preview is complete, touch the intro text to edit its content and style.

**3** When you are finished, touch  to save the video and follow the onscreen instructions to export it.


### View Spotlight Reels

Spotlight Reel analyses your videos to create highlight clips of people and objects in them and presents them to you with background music.

- 1** Go to  **Gallery** > **Albums** > **Videos**.
- 2** Touch a video, then swipe up on the video. Touch a person's face or **Best cut** to view the created Spotlight Reel.  
If a clip has not yet been generated, touch **GET STARTED** to create one.

 This feature works automatically when your device is charging and the screen is off. It only works on local videos between 10 seconds and 3 minutes long.

### Share Spotlight Reels

- 1** Go to **Gallery** > **Albums** > **Video Editor**, where you'll find all your exported videos.
- 2** Touch and hold to select the videos you want to share, then touch .



## Huawei Vlogs

### People Album Videos

Gallery automatically creates People albums by identifying faces in photos.


View, edit, and share the videos generated in these People albums.






### View Huawei Vlogs

- 1** Go to  **Gallery** > **Discover** and touch a people album.
- 2** Touch  on the album cover.

### Edit People Album Videos

Apply special effects, filters, and background music to make your videos stand out.


1 Touch  to play the video. During playback, you can:

- Select a video template: Touch .
- Edit video clips: Touch  to adjust the video frame or length, or add or delete video clips.
- Edit background music: Touch  and choose from preset background music or your locally saved music.
- Add filter effects: Touch  to select a filter. Drag the slider to adjust the filter effect.
- Edit the intro and outro: Touch  to select an intro and outro. After the preview is complete, touch the intro text to edit its content and style.

### Share People Album Videos

When exporting People album videos, you can share them with your friends by following the onscreen instructions.


The exported videos are saved in **Gallery > Albums > Video Editor**.

Touch and hold to select videos you would like to share, then touch .

## Highlights

### Highlights

Gallery automatically creates Highlights albums from your best photos and videos based on time, location, and theme information, and even generates a short video clip so you can instantly relive the good times.

- To start using Highlights, go to **Camera >**  and enable **Location tag**.
- Highlights albums are created automatically when your device is charging, the screen is turned off, and the battery is at least 50% charged. This process may take some time. Highlights albums will not be created if there are fewer than 10 photos or videos in Gallery.

### View Highlights Videos






1 Go to  **Gallery > Highlights** and touch an album.


2 Touch  to play the video.

### Edit Highlights Videos

1 When you are watching a Highlights video, touch the video to select a preset template at the bottom of the screen.


**2** To make even more customisations, you can:

- Select a video template: Touch .
- Edit video clips: Touch  to adjust the video frame or length, or add or delete video clips.
- Edit background music: Touch  and choose from preset background music or your locally saved music.
- Add filter effects: Touch  to select a filter. Drag the slider to adjust the filter effect.
- Edit the intro and outro: Touch  to select an intro and outro. After the preview is complete, touch the intro text to edit its content and style.

**3** When you are finished, touch  to save the video and follow the onscreen instructions to export it.

### Share Highlights Videos




**1** Go to **Gallery > Albums > Video Editor**, where you'll find all your exported videos.

**2** Touch and hold to select the videos you want to share, then touch .

### Add or Remove Photos and Videos from Highlights Albums


**1** On the **Highlights** tab, touch an album.

**2** You can then:

- Add photos or videos: Touch , select the items you want to add, then touch .
- Remove photos or videos: Touch and hold to select photos or videos you want to remove, touch , then touch **Move**.

### Rename Highlights Albums

**1** On the **Highlights** tab, touch an album.

**2** Go to  > **Rename** and enter a new name.

### Delete Highlights Albums

**1** On the **Highlights** tab, touch an album.


**2** Go to  > **Delete** and touch **Delete**.

# Apps

## Apps



### Apps

#### Locate an Installed App






Swipe down from the middle of the home screen to show the search bar, and enter the app name. When the app is found, touch  next to its name.

#### Uninstall an App

You can uninstall an app using either of the following methods:


- Touch and hold the app icon you want to uninstall until your device vibrates, touch **Uninstall**, then follow the onscreen instructions to uninstall the app.
- Go to  **Settings** > **Apps** > **Apps**, touch the app you want to uninstall, then touch **Uninstall**.
  -  Some pre-installed system apps can't be uninstalled, as uninstalling them may cause system errors.

#### Manage Background Apps

- 1 Access the recent tasks screen using either of the following methods, depending on the navigation method you are using:
  - **Gestures:** Swipe up from the bottom of the screen and hold.
  - **Three-key navigation:** Touch .
- 2 On the recent tasks screen, you can:
  - Swipe across to view app previews.
  - Touch an app preview to access an app.
  - Swipe up on an app preview to close an app.
  - Swipe down on an app preview to lock it.  will appear at the top of the app preview. Touching  will not close this app.
  - Swipe down again to unlock it.  will disappear.
  - Touch  to close all apps (except for those you have locked).




#### Clear the Cache of an App

Delete app cache files to free up storage space.


Go to  **Settings** > **Apps** > **Apps**, select the app for which you want to clear the cache, then go to **Storage** > **Clear cache**.

## Contacts




### Create and Edit Contact Information

- 1 Open  **Phone**, select the **Contacts** tab at the bottom of the screen, then touch . If you are creating a contact for the first time, touch **Create new contact** to start adding a contact.
- 2 Touch the camera image to set a profile picture for the contact, enter information such as the name, organisation, and phone number of the contact, then touch .

### Import Contacts

- 1 On the **Contacts** screen, go to  > **Settings** > **Import/Export**.
- 2 Select **Import via Bluetooth**, **Import via Wi-Fi Direct**, or **Import from storage**, then follow the onscreen instructions to import contacts.


### Scan Business Cards to Add Contacts

- 1 On the **Contacts** screen, go to  > **Scan** or go to **Business cards** > **Scan**.
- 2 Place a business card on a flat surface, adjust the camera so that the contents on the business card are clearly displayed in the viewfinder, then touch  to capture a single or multiple business cards in a row.
- 3 After the photos are taken, your device will automatically identify the contact information. Touch  to save the contact.


You can view the scanned business cards in **Business cards**.

### Scan a QR Code to Add a Contact

If a QR code contains contact information, you can scan the QR code to quickly add a contact.


- 1 On the **Contacts** screen, go to  > **Scan** or go to **Business cards** > **Scan**.
- 2 Take a photo of a QR code or select a photo of a QR card from Gallery, and contact information contained in the QR code can be identified and added.

### Search for Contacts


- 1 From the **Contacts** screen, go to  > **Settings** > **Display preferences** and touch **All contacts** to display all your contacts.
- 2 Search for contacts using either of the following methods:

- Swipe down from the middle of the home screen, enter a keyword for the contact you want to find in the search box (such as their name, initials, or email address). You can also enter multiple keywords, such as "John London", to quickly find matching contacts.
- Enter keywords for the contact you want to find in the search box above the contacts list. Matching results will be displayed below the search box.

## Share Contacts



- 1 On the **Contacts** screen, select the contact you want to share, then go to  > **Share contact**.
- 2 Select a sharing method, then follow the onscreen instructions to share the contact.



## Export Contacts

- 1 On the **Contacts** screen, go to  > **Settings** > **Import/Export**.
- 2 Touch **Export to storage** and follow the onscreen instructions to export contacts. The exported **.vcf** files are saved in the root directory of your device's internal storage by default. You can open **Files** to view the exported files in the internal storage.



## Delete Contacts

Delete contacts using either of the following methods:

- Touch and hold the entry you want to delete, then touch **Delete**.
- On the **Contacts** screen, go to  > **Settings** > **Organise contacts** > **Delete multiple contacts**, select the entries you want to delete, then touch .

To restore deleted contacts, go to  > **Settings** > **Organise contacts** > **Recently deleted**, touch and hold a contact you want to restore, select the check boxes of any others you also want to restore, then touch .




## Merge Duplicate Contacts

- 1 Open  **Phone**, select the **Contacts** tab at the bottom of the screen, then touch  > **Settings** > **Organise contacts** > **Merge duplicate contacts**.
- 2 Select duplicate contacts to be merged and touch **Merge**.



## Manage Contact Groups

You can conveniently send emails or messages to multiple contacts by creating and managing contact groups. Your device automatically groups contacts by company, city, and last contact time, but you can also create new groups based on your preferences.



## Create a Contact Group

- 1 Open  **Phone**, select the **Contacts** tab at the bottom of the screen, then touch **Groups**.
- 2 Touch , enter the group name, such as "Family" or "Friends", then touch **OK**.
- 3 Follow the onscreen instructions to add contacts to the group, then touch .

## Edit a Contact Group

- 1 On the **Groups** screen, select the group you want to edit and touch  to add a new contact.
- 2 Touch  for **Remove members**, **Group ringtone**, **Delete group**, or **Rename**.

## Send Group Messages or Emails

On the **Groups** screen, open a group, then touch  to send a message or touch  to send an email.



## Delete Contact Groups

On the **Groups** screen, touch and hold the group to be deleted, then touch **Delete**.

## Create Personal Information

You can create a business card containing your personal information to share with others. You can also add personal emergency information so you can call for help quickly in an emergency.

## Create a Personal Business Card



- 1 Open  **Phone**, select the **Contacts** tab at the bottom of the screen, then touch **My card**.
- 2 Set your profile picture, enter personal information such as your name, work address, and phone number.
- 3 Touch  to automatically create a QR code business card. You can share your business card using the QR code.

## Add Emergency Information

- 1 From the **Contacts** screen, go to **My card** > **Emergency information**.
  - 2 Touch **ADD** and set your personal, medical, and emergency contact information.
- Once you have added emergency contacts and you find yourself in an emergency, access the lock screen for inputting your password, go to **Emergency** > **Emergency information** > **Emergency contacts**, and select an emergency contact to make a call.



## Erase Contact Traces


- 1 Open  **Phone**, touch the **Contacts** tab at the bottom of the screen, then touch the contact for whom you wish to erase contact traces.
- 2 Go to  > **Erase history** > **Erase** to delete all call and message records for that contact.

## Phone

### Make a Call

#### Dial a Number or Select a Contact to Call



Use either of the following methods to make a call:

- Open  **Phone**, enter part of a phone number, the first letter of a contact's name, or the contact's initials to find a contact.
- On the **Phone** screen, touch the **Contacts** tab at the bottom, then select a contact to make a call.

Touch  to end a call.

### Use Speed Dial

Once you've set up speed dialling for a contact, you can quickly call that contact with the assigned number key.

Go to  **Phone** >  > **Settings** > **Speed dial**, select a number key, then set a contact for this speed dial number.


### Press the Power Button to End a Call

During a call, press the Power button to end the call.



Go to  **Phone** >  > **Settings** > **More** and enable **Power button ends call**.

### Set a Call Background



You can set a wallpaper as the call background.

- 1 Go to  **Settings** > **Home screen & wallpaper** > **Wallpaper**.
- 2 Select a picture and set it as the wallpaper.

You can also set a profile picture for a contact to be shown on the call background.

- 1 On the **Phone** screen, touch the **Contacts** tab at the bottom, then select the contact you want to set a profile picture for.
- 2 Touch  and then touch  to set a profile picture for the contact.



## Make an International Call

- 1 Contact your mobile carrier to activate and inquire about the international calling service.
- 2 Open  **Phone**, touch the **Contacts** tab at the bottom, then select a contact to make a call.  
For numbers that are not in the contacts list, on the **Phone** screen, touch and hold the 0 number key to display +, enter the country code and phone number, then touch  to make an international call.



## Manage Call Logs

You can merge the call logs of the same contact or number for a tidier and more concise interface, or delete call logs as required.

### Merge Call Logs



- 1 Go to  **Phone** >  > **Settings** > **Merge call log**.
- 2 Select **By contact** and your device will automatically merge the call logs of the same number or contact.

### View Missed Calls

- 1 To display all missed calls, open  **Phone**, swipe down on the call log list, then touch the **Missed** tab.  
All missed calls are displayed in red in the call log list for you to quickly identify them on the **All** screen.
- 2 Touch  next to a call log to call back or send a message.

### Delete Call Logs

Delete call logs using either of the following methods:




- On the **Phone** screen, touch and hold a call log, then touch **Delete entry**.
- On the **Phone** screen, go to  > **Delete entries**. Select multiple call logs, then touch  to delete them.

## Set a Ringtone for Incoming Calls

You can set your favorite music or a video as the ringtone for incoming calls.





If two SIM cards have been inserted into your device, configure the ringtone separately for SIM 1 and SIM 2.

### Set a Music Ringtone


- 1 Go to  **Phone** >  > **Settings** > **Ringtone** or  **Settings** > **Sounds & vibration** > **Phone ringtone**.
- 2 Select a system ringtone, or touch **Music on device** to select a local song as the ringtone.

## Set a Video Ringtone

Set a video as the ringtone for incoming calls.

- 1 Go to  **Phone** >  > **Settings** > **Ringtone** or  **Settings** > **Sounds & vibration** > **Phone ringtone**.
- 2 Touch **Video ringtones** and select a video to preview the effect for incoming calls.
- 3 Touch  to set the video as the ringtone.

## Set a Ringtone for a Contact

- 1 Open  **Phone**, touch the **Contacts** tab at the bottom of the screen, then select the contact you want to set a ringtone for.
- 2 On the contact details screen, touch **Ringtone** and select a ringtone.



## Use VoLTE to Make Calls

Voice over LTE (VoLTE) is an IP-based data transmission technology that delivers both call and data services over a 4G network.

Once VoLTE is enabled, you can make a call while accessing the Internet. If your device supports dual SIM dual VoLTE, you can receive an incoming call on a SIM card while the other SIM card is being used for a call.



VoLTE also provides you with a faster call connection time and higher quality voice and video calls.


### Enable VoLTE

- 1 Contact your mobile carrier to activate the 4G and VoLTE functions for your SIM card. If both the primary and secondary SIM card trays of a dual-SIM device support 4G and VoLTE, 4G and VoLTE can be enabled for both SIM cards.
- 2 Go to  **Settings** > **Mobile network** > **Mobile data**. In the network settings area of SIM 1 or SIM 2, turn on the **VoLTE calls** switch.
  -  This feature may vary depending on your carrier.
    - The 4G network is used as an example here. If your device supports 5G, the operations are the same.
    - 5G is only available in some countries and regions.

## Make a Video Call

Video calls are only possible when both parties are using VoLTE-activated devices.

- 1 Open  **Phone**, touch the **Contacts** tab at the bottom of the screen, then select the contact you want to call.
- 2 Touch  to make a video call.





During a voice call, you can also touch  to switch to a video call.

## Manage Incoming Calls





You can use the call waiting feature to answer incoming calls when you are already engaged in a previous call. If you cannot answer a call because your device is faulty or the network signal is poor, you can also set call forwarding to forward calls to another number or device.

### Answer or Reject an Incoming Call

If you receive a call when the screen is locked:


- Drag  right to answer the call.
- Drag  left to reject the call.
- Touch  to reject the call and reply with an SMS message.
- Touch  to set a callback reminder.



If you receive a call when the screen is unlocked:


- Touch  to answer the call.
- Touch  to reject the call.
- Touch  to reject the call and reply with an SMS message.
- Touch  to set a callback reminder.

### Enable Call Waiting



The Call waiting feature lets you answer incoming calls when a call is already in progress by placing the first call on hold.

 This feature requires the support of your mobile carrier. For details, contact your carrier.

Go to  **Phone** >  > **Settings**. Under the SIM card you wish to enable call waiting on, go to **More** > **Call waiting**.


 This feature may vary depending on your carrier.


### Answer a New Incoming Call During a Call


- 1 When you receive an incoming call when you are already engaged in a previous call, touch  to answer it.
- 2 Touch  or touch a held call in the call list to switch between the two calls.

## Enable Call Forwarding


After the Call forwarding feature is enabled, calls that meet set conditions will be automatically transferred to a specified phone number.

 This feature requires the support of your mobile carrier. For details, contact your carrier.

- 1 On the **Phone** screen, go to  > **Settings**, and touch **Call forwarding**.  
If your phone has two SIM cards, configure separate settings for SIM 1 and SIM 2.
- 2 Select and enable a forwarding method, then enter and confirm the target number.

 This feature may vary depending on your carrier.

## Disable Call Forwarding

- 1 On the **Phone** screen, go to  > **Settings**, and touch **Call forwarding** under the SIM card you wish to disable call forwarding on.
- 2 Select the forwarding mode that you wish to disable and disable it.

 This feature may vary depending on your carrier.

## Filter and Block Spam Calls






Set different block rules to block sales, fraud, and other kinds of spam calls.

### Filter Spam Calls

- 1 Go to  **Phone** >  > **Blocked** >  and set the block rules.  
Alternatively, go to  **Optimiser** > **Blocked** >  to set the block rules.
- 2 Touch **Call block rules** and toggle on the switches of corresponding block rules.

### Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:

- Go to  **Phone** >  > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.
- On the **Phone** screen, touch the **Contacts** tab at the bottom, touch the contact you want to block, then go to  > **Block contact**.


### Set Whether to Receive Notifications for Blocked Calls

Go to  **Phone** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications for blocked calls.

## Emergency SOS and Calls

### Use Emergency SOS

If you encounter an emergency, you can quickly and secretly send an SOS message to your emergency contacts.


- 1 Enable GPS and allow the Emergency SOS feature to access your location.
- 2 Go to  **Settings** > **Security** > **Emergency SOS**, enable **Also send SOS message**, then set your emergency contacts.


Once you have enabled the Emergency SOS feature, if you encounter an emergency, press the Power button five times in quick succession and your device will automatically send a message with your current location to your emergency contacts.

Once the message is sent, your device will bring up the emergency call screen, from which you can quickly call an emergency service or one of your emergency contacts.

### Make Emergency Calls





In the event of an emergency, you can make emergency calls directly from the lock screen of your device even if there is no signal.

 The emergency call feature is subject to local regulations and individual mobile carriers. Network issues or other types of interference may lead to emergency calls not working.

- 1 From the lock screen, access the screen for inputting your password, and touch **Emergency**. If you are in an area with a good signal and your device has an Internet connection, it will automatically obtain your location and display it on the screen.
- 2 Enter your local emergency number and touch  to call the number. Alternatively, touch **Emergency information** and select an emergency contact to call.

### Make Operations During a Call

During a call, an in-call menu will be displayed.



- Touch  to enable hands-free mode.
- Touch  to start another call (only available once three-way calling has been activated). This feature requires the support of your mobile carrier. For details, contact your carrier.
- Touch  to use the dialler.
- During a call, you can hide the call screen and access other apps by returning to the previous screen or home screen using the current navigation mode. To return to the call screen, touch the green bar on the left of the status bar.
- Touch  to end the call.

## Use Voicemail

Divert calls to your voicemail when your device is switched off or when there is no cellular coverage. Callers can leave a voice message which you can listen to later.

This feature requires service support from your mobile carrier. Contact your mobile carrier for details.

### Enable Voicemail







- 1 Go to  **Phone** >  > **Settings** > **More**.  
If two SIM cards have been inserted into your device, touch **More** under SIM 1 or SIM 2.
- 2 Go to **Voicemail** > **Voicemail number**, enter the voicemail number obtained from your carrier, and touch **OK**.

### Listen to a Voicemail Message


Touch and hold the 1 key on the dialler and then enter your voicemail number.

## Messaging


### Send and Manage Messages

- 1 Open  **Messaging** and touch .
- 2 On the **New message** screen, enter your message content. Touch  to add other types of content such as pictures and audio files.
- 3 In the recipient box, touch , select contacts or contact groups, then touch .  
To send a group message to those not included in your contacts list, touch anywhere blank in the recipient box and enter the recipients' phone number. Touch the return key in the keyboard when you finish entering each of the phone numbers.
- 4 After finishing editing, touch  to send the message.

### Save a Draft Message


From the **New message** screen, touch  to save a draft message.

### Cancel Sending a Message

On the **Messaging** screen, go to  > **Settings** > **Advanced** and enable **Recall messages**.  
Within six seconds after the message is sent, you can double-touch the message to cancel sending it.

### View and Reply to Messages



- 1 On the **Messaging** screen, select a contact to view your conversation with them.

**2** To reply to a message, enter your message content in the text box, then touch .

New messages will be displayed in the notification panel in the form of banners and you can touch them there to reply.



### Mark Messages as Read

You can use any of the following methods to mark messages as read:

- New messages will be displayed in the notification panel in the form of a banner and you can mark them as read there.
- On the **Messaging** screen, swipe left on the message that you want to mark as read, then touch .
- On the **Messaging** screen, go to  > **Mark all as read**.

### Delete a Message

You can delete messages using either of the following methods:


- On the **Messaging** screen, swipe left the message to be deleted, then touch .
- Touch and hold a message, select multiple messages you wish to delete, then touch . Deleted messages cannot be recovered.

### Filter and Block Spam Messages

Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.


#### Block Spam Messages

Go to  **Messaging** >  > **Blocked** >  and set block rules.

You can also go to  **Optimiser** > **Blocked** >  to set block rules.

#### Block Messages from Specific Numbers

**1** Go to  **Messaging** >  > **Blocked** >  > **Blocklist**.

**2** Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.




#### Block Messages Containing Specific Keywords

**1** Go to  **Messaging** >  > **Blocked** >  > **Keyword blocklist**.

**2** Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.






## Set Whether to Receive Notifications for Blocked Messages



Go to  **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

## Calendar

### Add and Manage Events

- 1 Open  **Calendar** and touch .
- 2 Enter the details of the event, such as the title, location, and start and end times.
- 3 Touch **Add reminder** to set the reminder time for the event.
- 4 Touch  to save the event.


### Import Meeting Reminders

- 1 Go to  **Calendar** >  > **Manage accounts**.
- 2 Touch **Add account**, then follow the onscreen instructions to add your work emails (from your Exchange account) to the calendar to see meeting reminders.

### Search for Events



- 1 On the **Calendar** screen, touch .
- 2 Enter keywords of your event in the search box, such as the title and location.

### Share an Event

- 1 On the **Calendar** screen, touch an event on the calendar or under the schedule.
- 2 Touch  and follow the onscreen instructions to share the event using whichever method you prefer.

### Delete Events



You can delete events using the following methods:

- On the **Calendar** screen, touch the event to be deleted and touch .
- On the **Calendar** screen, touch and hold an event, select the events you want to delete, then touch .

### Set a Calendar Notification



Set the calendar notification type according to your requirements. You can set status bar notifications, banner notifications, sound notifications, and more.

You can also change the default reminder time to control when your device will send you a reminder.

- 1 Go to  **Calendar** >  > **Settings**.
- 2 In the reminder settings, set **Default reminder time** and **Reminder time for all-day events**.
- 3 Touch **Notifications** and enable **Allow notifications**. Then follow the onscreen instructions to set a notification type.

## Customise the Calendar View

Set the start day of the week, whether or not to show week numbers, and more in the calendar view settings.

- 1 Go to  **Calendar** >  > **Settings**.
- 2 Set the start day of the week, whether or not to show week numbers, and so on.



## Set Alternate Calendars

Set the Calendar to display other calendars as well, such as the Chinese lunar calendar or the Islamic calendar.

Go to  **Calendar** >  > **Settings** > **Alternate calendars** and select another calendar.

## View National/Regional Holidays

View national/regional holidays in the calendar to help plan your travel.



- 1 Go to  **Calendar** >  > **Settings** > **National/Regional holidays**.
- 2 Turn on the switch of a country/region, and your device will automatically download holiday information for that country/region and display it in the Calendar.

# Clock


## Alarm

You can set alarms to play a sound or vibrate at specific times.

### Set an Alarm

- 1 Go to  **Clock** > **Alarm**, touch , and set a time.
- 2 Select a sound for the alarm. The sound will play when you select it. You can press the Volume buttons to adjust its volume.
- 3 Set the following options according to your preferences:
  - Repeat
  - Vibrate

- Ring duration
- Snooze duration
- Label

**4** When you are finished, touch .

### Modify or Delete an Alarm

Touch an existing alarm to modify or delete it.

### Snooze an Alarm

If you don't want to get up when an alarm rings, simply touch the snooze button or press the Power button.

The snooze length is set when creating the alarm.




### Turn Off an Alarm

When an alarm rings, swipe left or right on the button that appears at the bottom of the screen to turn it off.

## Timer and Stopwatch

You can use the timer to count down from a specified time. You can also use the stopwatch to measure the duration of an event.

### Timer



Go to  **Clock** > **Timer**, set the duration of time, and touch  to start the timer. To stop it, touch .

### Stopwatch

Go to  **Clock** > **Stopwatch**, and touch  to start the stopwatch. To stop it, touch .


## View the Time in Cities Worldwide


Use **Clock** to see the local time in different time zones around the world.

Go to  **Clock** > **World clock**, touch , and enter the name of a city or select one from the list of cities.

## Display Dual Clocks on the Lock Screen

When you are away from your home time zone, use **Dual clocks** to display the time of both your home city and current location on the lock screen.






Go to  **Settings** > **System & updates** > **Date & time**, enable **Dual clocks**, and set a **Home city**. The time of your home city and current location will now both display on the lock screen.

-  Only one clock will display on the lock screen if your current location is in the same time zone as your home city.

## Notepad

### Create Notes

You can create notes to record your thoughts and inspirations.

- 1 Go to  **Notepad** > **Notes**, then touch .
- 2 Enter the title and content of the note.
- 3 Touch  to insert a picture into the note as required. Touch and hold the picture, then drag it to the desired position in the note.
- 4 If you want to organise your notes for easier access and viewing, touch  to add a tag to your note after finishing it.
- 5 Touch  to save the note.

### Manage Your Notepad



You can sort your Notepad items by category and put them into different folders, delete unwanted items, and share items with other people.

When viewing a list of items or an individual item in Notepad, touch the status bar at the top of the screen to quickly return to the first item or the beginning of the item you are viewing.

### Sort Notepad Items by Category


Different types of notes or to-dos can be sorted by category and displayed in different colours for more convenient viewing.

You can sort notepad items using either of the following methods:

- On the **All notes** or **All to-dos** screen, swipe left on an item, touch , then select a tag.
- Touch and hold a note or to-do, select or drag over the check boxes of the notes or to-dos you want to categorise under the same tag, then touch  to select a tag.



### Share Notepad Items


You can share your Notepad items as text files or images.

On the **All notes** or **All to-dos** screen, touch the item to be shared, touch , then follow the onscreen instructions to share it.

### Delete Notepad Items




 
You can delete notepad items using either of the following method:

- On the **All notes** or **All to-dos** screen, swipe left on a note or to-do, then touch  to delete it.
- Touch and hold a note or to-do you want to delete, select or drag over the check boxes of any other notes or to-dos you want to delete as well, then touch .

To restore a deleted Notepad item, touch **All notes** or **All to-dos**, select the item you want to restore in **Recently deleted**, then touch .

## Recorder




### Recorder

- 1 In the **Tools** folder, open  **Recorder**, and touch  to start a recording.
- 2 During a recording, you can touch  to add a tag.
- 3 When you are finished, touch  to stop recording.
- 4 You can also touch and hold a recording, then share, rename, or delete it. Recordings are saved under **Files** > **Categories** > **Internal storage** > **Sounds**.




### Play a Recording

Recording files are listed on the  **Recorder** home screen. Touch a recording to play it.



On the recording playback screen, you can:

- Touch  to skip the muted parts.
- Touch  to adjust the playback speed.
- Touch  to add a tag.
- Touch a tag to rename it.

### Edit a Recording

- 1 On the  **Recorder** home screen, touch a recording.
- 2 Touch  to display the waveform of the recording.
- 3 Drag the start and end bars to adjust the clip length. Pinch your fingers on the waveform to zoom in or out to adjust the clip length more precisely.
- 4 Touch  and select **Keep selected part** or **Delete selected part**.

## Share Recordings


- 1 On the  **Recorder** home screen, touch the recording you want to share to play it.
- 2 Go to  > **Share**.
- 3 Select your preferred sharing method and follow the onscreen instructions to share the recording.

## Email

### Add Email Accounts


Add your email account in **Email** and you can use your device for convenient email access at any time.

#### Add a Personal Email Account





- 1 Open  **Email** on your device and select from the available mailbox providers or touch **Other**.
- 2 Enter the email address and password, touch **Sign in**, and follow the onscreen instructions to configure the server settings. The system will automatically connect to the server and check the server settings.


#### Add an Exchange Account

Microsoft Exchange enables digital messaging within a company. If your company mailbox uses the Exchange server, you can log in to your company email account on your device.


- 1 Contact the company email server administrator to obtain the domain name, server address, port number, and security type.
- 2 Open  **Email**, and select **Exchange**.
- 3 Enter the email address, user name, and password.
- 4 Touch **Manual setup**. On the **Account setup** screen, set parameters such as the email domain name, server address, port number, and security type.
- 5 Touch **Next**, then follow the onscreen instructions to complete the configuration. The system will automatically connect to the server and check the server settings.

### Send Emails

- 1 Open  **Email**, then touch .
- 2 Enter the recipient's email address, or touch  to select a contact or group, then touch .




- 3 Add the addresses of any recipients to whom you wish to CC or BCC the email. If you have more than one email account, you will also need to select the email address you wish to send the email from.
- 4 Write the email and enter the subject, then touch .

### Save an Email as a Draft

On the **Compose** screen, enter the recipient's email address, subject, or email content, and touch  to save the email as a draft.



Go to **Inbox > Show all folders > Drafts** to view draft emails.

### Reply to an Email



- 1 On the **Inbox** screen, open the email you wish to reply to.
- 2 Touch  to reply to just the email sender, or touch  to reply to everyone on the thread.
- 3 After writing your reply, touch .

### Set Encryption for Outgoing Emails

You can encrypt outgoing emails to protect your confidential information. Encrypted emails can be viewed only by recipients who have the required digital certificates, ensuring information security.



- 1 Apply for and install a digital certificate.
  -  You need to apply for a digital certificate from a trusted third-party certificate authority (CA) before installing it. The processing procedure varies between different CAs. For details, refer to the relevant CA website.
- 2 From the **Inbox** screen, go to  > **Settings**.
- 3 Touch the account you want to set encryption for, touch **Email encryption**, then enable **Encrypt outgoing emails**.
- 4 If the certificate has been installed, select **Encryption certificate** and set **Encryption algorithm** according to your preferences.  
If no certificate has been installed, enable **Send encrypted emails without installing certificates**.

### Set Automatic Replies for an Exchange Account

- 1 Go to  **Email** >  > **Settings**.
- 2 Select the Exchange account you want to set automatic replies for, touch **Automatic replies**, and turn on the **Automatic replies** switch.
- 3 Set the time or content of the auto reply, then touch **Done**.

## Set Email Notifications



Set a notification mode for your emails based on your needs.

- 1 Go to  **Email** >  > **Settings** > **General** > **Notifications** and enable **Allow notifications**.
- 2 Select the email account you want to set notifications for, turn on the **Allow notifications** switch, then select a notification mode.

## View and Manage Emails

Receive, view and manage your emails in the inbox.

### View an Email


- 1 Open  **Email**, then swipe down on the **Inbox** screen to refresh the email list. If you have multiple email accounts, touch **Inbox** and select the email account you want to view.
- 2 Open an email, then view, reply to, forward, or delete the email. If you are notified about an important event in an email, touch  > **Add to calendar** to import the event into your calendar.
- 3 Swipe left or right to view the next or previous email.

### Organise Emails by Subject

On the **Inbox** screen, go to  > **Settings** > **General**, then enable **Organise by subject**.

### Add an Email Contact to a Group


You can create email groups to communicate more efficiently.

- 1 On the **Inbox** screen, open an email, and touch **Add to group**.
- 2 Choose to add the email sender or recipient to the group, and touch **OK**.
- 3 On the group selection screen, select an existing group, then touch  to save the contact in the group. Alternatively, touch **Create group**, enter the group name, then touch **Save**.

Once you have created a group, you can select the group from the recipient drop-down list to send emails to group members.

### Sync Emails

After automatic email syncing is enabled, the emails on your device will be automatically synced with those on the email server.


- 1 On the **Inbox** screen, go to  > **Settings**.
- 2 Touch the account you wish to sync emails for, then turn on the **Sync Email** switch.
- 3 Touch **Sync frequency** to set the automatic syncing period.



## Search for an Email

On the **Inbox** screen, touch the search box, then enter keywords such as the subject or content of the email.



## Delete Emails

On the **Inbox** screen, touch and hold the email to be deleted, drag over the check boxes of any other emails you want to delete, then touch .

## Manage Email Accounts

You can add multiple email accounts so you can manage them at the same time.


### Add Email Accounts

- 1 Go to  **Email** >  > **Settings** > **Add account**.
- 2 Select an existing email service provider or touch **Other**, then follow the onscreen instructions to add an email account. Repeat for each of the accounts you wish to add.


### Switch Between Email Accounts

On the **Inbox** screen, touch **Inbox** and select the email account you wish to use.

### Change Account Name and Signature

On the **Inbox** screen, go to  > **Settings** and select an account. You can then set or change the **Account name**, **Signature**, and **Default account**.

### Log Out of an Email Account



On the **Inbox** screen, go to  > **Settings**, select an account, and touch **Remove account**.

## Manage VIP Contacts



Important email contacts can be added as VIP contacts. Emails from VIP contacts will be automatically stored in the VIP inbox.



### Add a VIP Contact

You can add VIP contacts using either of the following methods:

- Go to  **Email** >  > **Settings** > **VIP contacts**. On the **VIP list** screen, go to **Add** > **Create** or touch **Add from contacts**, then follow the onscreen instructions.
- Open an email, touch the account name of the sender or receiver, then touch **Add to VIP list**.

### Delete a VIP Contact

- 1 Go to  **Email** >  > **Settings** > **VIP contacts**.

- 2 On the **VIP list** screen, touch .
- 3 Select the VIP contact to be deleted, then touch .


## Calculator

### Calculator

Use the calculator on your device to perform basic mathematical calculations and for calculating exponential, logarithmic, and trigonometric functions.

#### Use the Basic Calculator





You can open the calculator using either of the following methods:

- Swipe down from the middle of the home screen to display the search box. Search for **Calculator**, and the first result will be the preinstalled **Calculator** app.
- Find **Calculator** in the **Tools** folder.
- Swipe up from the bottom of the lock screen to display the shortcut panel, then touch  to open the calculator.

#### Use the Scientific Calculator

Open the calculator and rotate your device to landscape orientation.



#### Copy, Delete, or Clear Numbers

- Copy a calculation result: Touch and hold the calculation result, touch **Copy**, then paste the result somewhere else, such as in a note or message.
- Delete the last digit: Touch .
- Clear the display: Touch . You can also touch  to clear the display after touching  to complete the calculation.

## Torch

### Torch

You can turn on the torch using either of the following methods:

- Swipe down from the status bar to open the notification panel, and touch  to turn the torch on or off.
- Swipe up from the bottom edge of the lock screen to display the shortcut panel, and touch  to turn the torch on or off.

# Compass

## Compass

Compass shows you the direction your device is pointing, as well as your current coordinates and altitude.

**1** You can open Compass using either of the following methods:

- Swipe down from the middle of the home screen to display the search box. Search for **Compass**, and the first result will be the pre-installed **Compass** app.
- Find **Compass** in the **Tools** folder.

**2** To view your bearings, coordinates, and altitude:

- If you hold your device flat, the Compass screen will display a dial together with the direction your device is pointing, your current coordinates, and altitude.
- If you hold your device upright, the Compass screen will display the viewfinder of the rear camera on your device, together with the direction your device is pointing, your current coordinates, and altitude.

**3** To lock your current direction, touch the compass dial. The dial marks will turn blue if you go off course.

For more accurate bearings, hold your device flat or upright when using Compass.

For more precise altitude data, touch  and enable **Online altitude calibration**.

## How to Calibrate the Compass

If the direction displayed on the compass or map app is different from the actual direction, you need to calibrate the compass.

Find somewhere without any strong magnetic fields nearby (such as from a microwave oven or high-voltage wire poles). Hold the device and draw a figure of eight to calibrate the Compass.








## Mirror

### Mirror

When you want to know how you look but don't have a real mirror with you, you can use your device as a mirror instead.

Go to **Tools > Mirror**. While using your device as a mirror, you can:


- Zoom in or zoom out: Drag the zoom slider at the bottom. You can also touch the screen twice to zoom in and touch it twice again to zoom back out.
- Save the image: Touch the screen to pause the current image. Touch the screen again to resume. When the image is paused, touch  to save the image. You can find the saved image in **Gallery**.
- Adjust mirror brightness: Touch  or  at the top of the screen.
- Make the mirror brighter: Touch  and enable **Blow**. Then blow air into the microphone for the screen to fog up. Wipe the screen to clear the fog.
- Change the mirror frame: Touch  to use a different frame.
- Create a broken mirror effect: Touch and hold the screen to "break" the mirror, complete with a sound effect. Touch the screen again to "fix" the mirror.

## App Twin

## App Twin

App Twin enables you to log in to two Facebook accounts simultaneously without the hassle of having to constantly switch between them, allowing you to keep your work and private lives separate.

 **App Twin** will only work with certain apps.

- 1 Go to  **Settings** > **Apps** > **App Twin**, and turn on the switch for the app you want to create a twin of.
- 2 Two icons for the same app will display on the home screen for you to log in to your separate accounts simultaneously.
- 3 To disable App twin, touch and hold the twinned version of the app, then touch **Delete**. All the data of the twin app will be deleted.


## Quickly Access Frequently Used App Features


### Quickly Access Frequently Used App Features

You can access frequently used features of certain apps from app icons on the home screen, and even add shortcuts for these features to the home screen.

### Quickly Access Frequently Used App Features

Touch and hold an app icon until a pop-up menu is displayed. Then touch a frequently used feature to access it.

For example, touch and hold the  icon, then touch a shooting mode from the pop-up menu to access it.

 If no pop-up menu is displayed after you touch and hold an app icon, the app does not support this feature.

### Add Frequently Used App Features to the Home Screen

Touch and hold an app icon on your home screen to bring up the pop-up menu. Touch and hold the desired feature and drag it to your home screen to create a shortcut.

## Optimizer

### Cleanup

You can use **Cleanup** in **Optimiser** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open  **Optimiser**, then touch **Cleanup**.


- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

### Clean Up Duplicate Files

**Optimiser** can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files**, then select unwanted files to delete them.

### Manage Data Usage

Open  **Optimiser**, then touch **Data usage** to view data usage and manage network access.

### View and Manage High Data Consumption Apps


- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.
- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

### View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

### Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.

### Add Mobile Data Usage Reminders

Add data plans for your SIM cards and usage reminders in Optimiser to keep you informed of your data consumption.

- 1 On the data usage screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.
- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.
- 3 On the **More data settings** screen, you can set whether to show data used when the screen is locked.

### Filter and Block Spam Calls

Set different block rules to block sales, fraud, and other kinds of spam calls.

## Filter Spam Calls






1 Go to  **Phone** >  > **Blocked** >  and set the block rules.

Alternatively, go to  **Optimiser** > **Blocked** >  to set the block rules.

2 Touch **Call block rules** and toggle on the switches of corresponding block rules.

## Block Incoming Calls from Specific Numbers

You can block incoming calls from specific numbers using either of the following methods:

- Go to  **Phone** >  > **Blocked** >  > **Blocklist**, touch , then add the phone numbers you want to block.
- On the **Phone** screen, touch the **Contacts** tab at the bottom, touch the contact you want to block, then go to  > **Block contact**.

## Set Whether to Receive Notifications for Blocked Calls


Go to  **Phone** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications for blocked calls.

## Filter and Block Spam Messages

Set different block rules, such as your blocklist, to block sales, fraud, and other kinds of spam messages.


### Block Spam Messages

Go to  **Messaging** >  > **Blocked** >  and set block rules.

You can also go to  **Optimiser** > **Blocked** >  to set block rules.

### Block Messages from Specific Numbers

1 Go to  **Messaging** >  > **Blocked** >  > **Blocklist**.




2 Touch  and add the numbers you want to block. SMS and MMS messages sent by these numbers will all be blocked.

### Block Messages Containing Specific Keywords

1 Go to  **Messaging** >  > **Blocked** >  > **Keyword blocklist**.


2 Touch  and add the keywords to be filtered. All messages containing these keywords will be blocked.

## Set Whether to Receive Notifications for Blocked Messages

Go to  **Messaging** >  > **Blocked** >  > **Receive notifications** and set whether to receive notifications when messages are blocked.

## One-Touch Optimisation

Use the **OPTIMISE** feature of **Optimiser** to keep your device in an optimal state.




- 1 Open  **Optimiser** and touch **OPTIMISE**.
- 2 Results and recommendations will be displayed once the optimisation is complete.


## Phone Clone

### Phone Clone




**Phone Clone** lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.


#### Clone Data from an Android Device

- 1 On your new device, open  **Phone Clone** . Alternatively, go to  **Settings** > **System & updates** > **Phone Clone**, touch **This is the new phone**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 Phone Clone is only available on devices running Android 4.4 or later.

#### Clone Data from an iPhone or iPad

- 1 On your new device, open  **Phone Clone**. Alternatively, go to  **Settings** > **System & updates** > **Phone Clone**, touch **This is the new phone**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 Phone Clone is only available on devices running iOS 8.0 or later.



# HiSuite

## Introduction to HiSuite

Huawei **HiSuite** is a PC-based tool used for managing Huawei smart Android devices (including phones and tablets).

After you have installed **HiSuite** on your computer, you can manage data such as your contacts, messages, pictures, videos, and apps, back up data from and restore data to your device, and update your device to the latest version.


- 1 Visit the official Huawei website on your computer, search for **HiSuite**, then download and install the latest version of **HiSuite**.
- 2 Use a USB cable to connect your device to the computer. When a dialog box entitled **Use USB to** appears on your device, select **Transfer files**.
- 3 On the computer, open **HiSuite**, set the connection mode to USB cable. Then follow the onscreen instructions to establish a connection between your device and computer.

## Back Up and Restore Data Using HiSuite

After installing **HiSuite** on your computer and connecting your computer with your device, you can use **HiSuite** to back up data (such as contacts, messages, call logs, photos, videos, audio files, and documents) from your device to your computer. You can also restore data on your device from your computer.

### Back Up Data to a Computer

- 1 On the **HiSuite** home page, click **Back Up**.
- 2 Select the items you want to back up.
- 3 Click **Back Up**, follow the onscreen instructions to set the password and password hint, and confirm the settings.  
Backup data won't be able to restore if you forget the password.
- 4 **HiSuite** will then back up the data you selected. Keep the USB cable connected when the data is being backed up.
- 5 Click **Done** when all data has been backed up.

Backup data is saved under **C:\Users\User name\Documents\Hisuite\backup** on the computer by default. To change the backup directory on the computer, go to  > **Settings** > **Backup**.

### Restore Data

- 1 On the **HiSuite** home page, click **Restore**.
- 2 Click **Backup Files**, select the items you want to restore to your device, then click **Restore**.
- 3 Enter the password for the backup data and click **OK**.


**4 HiSuite** will then restore the items you have selected. Keep the USB cable connected when the data is being restored.

**5** Click **Done** when all data has been restored successfully.

## Update or Restore the System Using HiSuite

After installing **HiSuite** on your computer and connecting your computer with your device, you can use **HiSuite** to update the system of your device.

### Update the System

-  • Your personal data may be erased during a system update. It is recommended that you back up your data before updating your device.
- Ensure that your device is at least 20% charged and keep the USB cable connected throughout the update process. Do not power off or restart your device, or remove or insert a memory card.
- Some third-party apps, such as online banking and game apps, may not be compatible with the latest system version. It might take some time for the app developers to launch a compatible app version.

On the **HiSuite** home page, click **Update**. If a new version is detected, the version number will be displayed and you can click the version number to start updating the system.

Once the update is completed, your device will automatically restart.

## Tips

### Tips



**Tips** provides you with an abundance of information so you can quickly familiarise yourself with your device and make the best use of it. In **Tips**, you can also find a full set of user guides for more detailed instructions.


- Vividly depicted cards: Browse through the easy-to-read cards with a short clip or image to quickly get to grips with all the most useful features on your device. The cards are categorised so you can jump directly to a category you are interested in.
- User guides: Find detailed instructions in the comprehensive user guides.
- Try out features: A **TRY NOW** button is available in certain cards for you to try out the feature immediately.

# Settings

## Search for Items in Settings

### Search for Items in Settings

Tired of trudging through layers of settings? Just search for them using the search box.


- Swipe down from the middle of the screen to display the search box. Enter the name of a setting to obtain search results.
- Open  **Settings**, and enter the name of a setting in the search box at the top of the screen, to obtain search results.


## Wi-Fi

### Connect to a Wi-Fi Network

Connecting to the Internet over Wi-Fi is an effective way to save mobile data. You can also enable Wi-Fi security monitoring to avoid risky hotspots and ensure safe Internet access.

### Connect to a Wi-Fi Network


 Be extra careful when connecting to a free public Wi-Fi hotspot to avoid security risks and economic loss resulting from the leakage of your personal data.

- 1 Go to  **Settings** > **Wi-Fi**, and enable **Wi-Fi**.
- 2 Connect to a Wi-Fi network on the **Wi-Fi** screen using either of the following methods:
  - Select a Wi-Fi network to connect to under **Available networks**. A password is required for encrypted networks.
  - To manually add a Wi-Fi network, scroll down to the bottom of the screen, touch **Add network**, and enter the SSID and password as prompted to complete the connection.

The  icon displayed on the status bar indicates that the device is connected to Wi-Fi.

### Wi-Fi+

Once Wi-Fi+ is enabled, when your device detects a Wi-Fi network that it has previously connected to or that is free, it will automatically enable Wi-Fi and connect to the network. Your device will also evaluate the stability of Wi-Fi networks and switch to mobile data when the Wi-Fi signal is poor. Please note, this may incur extra charges.

- 1 Go to  **Settings** > **Wi-Fi**.
- 2 Go to **More settings** > **Wi-Fi+** and enable or disable **Wi-Fi+**.

# Bluetooth



## Bluetooth Basics

You can connect your device to Bluetooth headsets, speakers, and car kits. You can also use Bluetooth to share data between your device and other devices.

Make sure your device is within 10 m (about 33 ft.) of other Bluetooth devices.

## Enable or Disable Bluetooth

You can enable or disable Bluetooth in either of the following ways:

- Swipe down from the status bar to open the notification panel, then touch  to enable or disable **Bluetooth**. Touch and hold the switch to enter the **Bluetooth** settings screen.
- Go to  **Settings** > **Bluetooth**, then enable or disable **Bluetooth**.

## Set a Bluetooth Name

Set a Bluetooth name for your device to easily identify it during connection.

- 1 On the **Bluetooth** settings screen, toggle the **Bluetooth** switch on.
- 2 Touch **Device name**, enter a name, then touch **OK**.



## Pair with a Bluetooth Device

- 1 Enable Bluetooth on the target device and set it to discoverable. For detailed instructions, refer to the device's user guide.
- 2 From your device, access the **Bluetooth** settings screen, and enable **Bluetooth** to have your device automatically search for nearby Bluetooth devices.
- 3 From the list of **Available devices**, select the one you want to pair your device with, and follow the onscreen instructions to complete pairing.


On the **Bluetooth** settings screen, touch  to view tips for connecting various Bluetooth devices.

## Transfer Files via Bluetooth

You can use Bluetooth to transfer videos, pictures, contacts, and more to another device provided that both devices are within the effective Bluetooth range.



- 1 Pair the sending and recipient devices via Bluetooth.
- 2 On the sending device, touch and hold a file, select the files you want to share, touch , and select **Bluetooth**.
  -  Operations may vary if you are sharing files from apps directly.
- 3 Touch the Bluetooth name of the recipient device to start sharing.
- 4 On the recipient device, accept the Bluetooth transfer request.

## Unpair a Bluetooth Device

- 1 On the **Bluetooth** settings screen, enable the **Bluetooth** switch.
- 2 In the list of **Paired devices**, touch  next to the name of the device you wish to unpair, then touch **Unpair**.


## Mobile Data

### Connect to Mobile Data

- 1 Make sure that mobile data is available on your SIM card.
- 2 Connect to mobile data using either of the following methods:
  - Swipe down from the status bar to open the notification panel, then swipe down further to show all shortcut switches. Touch  to enable **Mobile data**.
  - Go to  **Settings** > **Mobile network** > **Mobile data** and enable **Mobile data**.



To conserve battery power and reduce data usage, disable the mobile data service when you don't need it.

### Enable 5G

-  • 5G is only available in some countries and regions.
- Not all devices support 5G.

5G refers to the fifth generation of mobile communications technology. Compared with a 4G network, a 5G network has a higher data transmission rate and a shorter delay.

When two SIM cards are inserted, only the default mobile data SIM will support 5G, while the other will only support 4G/3G/2G.


- 1 5G service depends on the support of your carrier's network and its deployment of relevant services. Please contact your carrier to activate the 5G service.
- 2 If your device has two SIM cards inserted, go to  **Settings** > **Mobile network** > **SIM management** and set SIM 1 or SIM 2 as the default mobile data SIM.
- 3 Go to  **Settings** > **Mobile network** > **Mobile data** and enable **5G** for the default mobile data SIM.

5G service may be unavailable in certain areas due to frequency interference in the carrier network.

### Manage SIM Cards

You can enable or disable SIM cards and name them for easier identification.

## Enable or Disable a SIM Card

Go to  **Settings** > **Mobile network** > **SIM management**, and turn on or off the switch for SIM 1 or SIM 2 according to your preferences.

Once disabled, a SIM card cannot be used for calling, messaging, or accessing the Internet.


## Name Your SIM Card

You can name your SIM cards for easier identification and management. For example, you could mark one SIM card as "Work" and the other as "Personal".


Go to  **Settings** > **Mobile network** > **SIM management** and touch  to edit the SIM card name.

## Configure Dual SIM Settings

If your device has two SIM cards inserted, you can set one as the default mobile data SIM and the other as the default calling SIM, or set call forwarding between the two SIM cards.

 This feature applies to dual-SIM devices only.


## Set a Default Mobile Data and a Default Calling SIM

Go to  **Settings** > **Mobile network** > **SIM management** and set SIM 1 or SIM 2 as the default mobile data or default calling SIM.

## Enable Call Forwarding Between SIMs

After enabling call forwarding between two SIM cards, incoming calls to an unavailable SIM card will be forwarded to the other one.


 This feature requires the support of your mobile carrier. For details, contact your carrier.

- 1 Go to  **Settings** > **Mobile network** > **SIM management** > **Call forwarding between SIMs**.
- 2 Select a call forwarding mode and turn on the corresponding switch.  
Call forwarding between SIMs is enabled when both switches are on.

## Personal Hotspot




Once **Personal hotspot** has been enabled, you can share your mobile data or the Wi-Fi network your device is currently connected to with other devices.

## Share Your Network Connection via Personal Hotspot


- 1 Go to  **Settings** > **Mobile network** > **Personal hotspot**.
- 2 Set **Device name** and **Password**.
- 3 Enable **Personal hotspot** and your device will share your mobile data or the Wi-Fi network you are currently connected to with other devices.

- 4 In the case of a Wi-Fi network, you can set the AP frequency band of the Wi-Fi hotspot. Go to **More > AP band** and touch **2.4 GHz** or **5 GHz**.
- 5 In the case of mobile data, you can set a mobile data limit for a single session. Go to **More > Data limit** and set the limit. When this limit has been reached, your device will automatically disable the hotspot.

### Share Your Network Connection via Bluetooth

- 1 Go to  **Settings > Bluetooth**, enable **Bluetooth**, select a device, then follow the onscreen instructions to complete pairing.
- 2 Go to  **Settings > Mobile network > Personal hotspot > More**, and enable **Bluetooth tethering**.
- 3 On the **Bluetooth** settings screen of the paired device, touch  next to your device name, then enable **Internet access** to establish an Internet connection and share your network connection.

### Share Your Network Connection via USB

- 1 Use a USB cable to connect your device to a computer.
- 2 On your device, go to  **Settings > Mobile network > Personal hotspot > More** and enable **USB tethering** to share your mobile data or Wi-Fi network.



### Use VoLTE to Make Calls

Voice over LTE (VoLTE) is an IP-based data transmission technology that delivers both call and data services over a 4G network.

Once VoLTE is enabled, you can make a call while accessing the Internet. If your device supports dual SIM dual VoLTE, you can receive an incoming call on a SIM card while the other SIM card is being used for a call.



VoLTE also provides you with a faster call connection time and higher quality voice and video calls.


### Enable VoLTE

- 1 Contact your mobile carrier to activate the 4G and VoLTE functions for your SIM card. If both the primary and secondary SIM card trays of a dual-SIM device support 4G and VoLTE, 4G and VoLTE can be enabled for both SIM cards.
- 2 Go to  **Settings > Mobile network > Mobile data**. In the network settings area of SIM 1 or SIM 2, turn on the **VoLTE calls** switch.
  -  This feature may vary depending on your carrier.
    - The 4G network is used as an example here. If your device supports 5G, the operations are the same.
    - 5G is only available in some countries and regions.

## Make a Video Call

Video calls are only possible when both parties are using VoLTE-activated devices.

- 1 Open  **Phone**, touch the **Contacts** tab at the bottom of the screen, then select the contact you want to call.
- 2 Touch  to make a video call.

During a voice call, you can also touch  to switch to a video call.

## Manage Data Usage

Open  **Optimiser**, then touch **Data usage** to view data usage and manage network access.

### View and Manage High Data Consumption Apps


- 1 You can find out how much data your apps are using in comparison to each other by going to **Data usage this month** on the Data usage screen.
- 2 Touch a high data consumption app to set mobile data, roaming data, or background data usage limits for it.

### View and Set the Network Access Permission of an App

On the Data usage screen, touch **Network access**, then change the settings for apps that consume a large amount of data (such as video streaming apps) so they can only be used when you are connected to a Wi-Fi network.

### Enable or Disable Smart Data Saver

Enable Smart data saver to prevent apps from using mobile data in the background.

- 1 On the Data usage screen, touch **Smart Data Saver**, then enable it. The  icon will then display on the status bar.
- 2 If you want to allow unrestricted access to data for some apps even when they are running in the background, toggle on the switches for these apps.

### Add Mobile Data Usage Reminders


Add data plans for your SIM cards and usage reminders in Optimiser to keep you informed of your data consumption.


- 1 On the data usage screen, go to **More data settings** > **Monthly data limit** and follow the onscreen instructions to add a data plan.
- 2 On the **More data settings** screen, touch **Usage reminders**. From there, you can set whether a notification will be sent or if mobile data will be disabled once the monthly data limit or roaming data limit has been topped.
- 3 On the **More data settings** screen, you can set whether to show data used when the screen is locked.



## Enable Data Roaming

Once you have activated the international roaming service, you can enable this feature to use mobile data when traveling in a different country or region.


-  • This feature requires the support of your mobile carrier. For details, contact your carrier.
  - Charges may apply when using the international roaming service. For details about how data roaming fees are charged, contact your carrier.

Go to  **Settings** > **Mobile network** > **Mobile data**. Under the SIM card for which you wish to enable the data roaming feature, enable **Data roaming**.

## More Connections



### NFC

Near Field Communication (NFC) is a short-range wireless communications technology that allows mobile and other electronic devices to connect in countless ways.

-  Enable **Read and write/P2P** on the NFC settings screen if available. This feature may vary depending on your carrier.


### Enable or Disable NFC

You can enable or disable NFC as follows:

- Swipe down from the status bar to open the notification panel, then swipe down further to show all shortcut switches. Touch  to enable or disable **NFC**. Touch and hold the switch to enter the **NFC** settings screen.
- Go to  **Settings** > **More connections** > **NFC**, and toggle the **NFC** switch on or off.

### Make Quick Payments with NFC

If you have installed a payment app (such as Alipay or WeChat) on your device and enabled the payment service, you can make payments with NFC.


- 1** Go to  **Settings** > **More connections** > **NFC**, and enable **NFC**.
- 2** Touch **Default app** on the **NFC** settings screen, then select a default payment app, like WeChat.
- 3** Enable NFC payments in the payment app. For example, in WeChat, go to **Me** > **Settings** > **General** and enable **NFC**.
- 4** Hold the NFC sensor (located near the rear camera) of your device against that of a POS terminal to enter the payment screen automatically. Complete the payment with a password or fingerprint.

## Wireless Projection


You can connect your device to an external display (for example, a TV) wirelessly.

- 1 Based on the model and functions of your external display, do the following:
  - If the external display supports Miracast, enable wireless projection on it.
  - If not, use a wireless HDMI adapter to connect your device and external display. Ensure that the wireless HDMI adapter is connected to a power supply.

To check whether your external display supports Miracast and how to enable wireless projection on it, consult the user guide or customer service of the external display manufacturer.

- 2 Swipe down from the status bar to open the notification panel, then touch  to turn on **Wi-Fi**.

- 3 Swipe down further on the notification panel to enable **Wireless Projection**. Your device will now search for the external display or the wireless HDMI adapter.

Alternatively, go to  **Settings** > **More connections** > **Easy Projection** and enable **Wireless Projection**.

- 4 Touch the name of the external display or the wireless HDMI adapter on the search result list to start projecting.

## Wired Projection

- 1 Prepare a Type-C cable.  
Use a Type-C to HDMI, Type-C to DP, or Type-C to MiniDP cable depending on your external display.
- 2 Connect the Type-C end to your device and the other end to the external display.
- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.


## Projection Using a Docking Station





If you need to connect your device to an external display and use a wired mouse and keyboard, use a docking station with a USB port.

- 1 Prepare a docking station.  
Multiple types of ports are available on a docking station. If your external display supports HDMI and you need to use a wired mouse and keyboard, use a docking station with at least one HDMI port and two USB ports.
- 2 Connect your device and the external display through the docking station, then connect the wired mouse and keyboard to the docking station.
- 3 On the external display, set the corresponding HDMI, DP, or MiniDP input as the signal source.

## Huawei Beam

You can hold the NFC sensors of two Huawei devices against each other to quickly transfer data between them, without the need to pair the devices or even having to touch to confirm.

-  Enable **Read and write/P2P** on the NFC settings screen if available. This feature may vary depending on your carrier.



- 1 Go to  **Settings** > **More connections** and enable **NFC** and **Huawei Beam** on the devices of both the sender and recipient.
- 2 On the sending device, touch and hold a file, select the files you want to share, touch , and select **Huawei Beam**.
  -  Operations may vary if you are sharing files from apps directly.
- 3 Keep the two devices unlocked and the screen turned on, then hold the NFC sensors (located around the rear camera) of the two devices together until a beep is heard and the sharing screen shrinks, which indicates that the connection was successful and the files have started transferring.
  -  Once the transfer has started, you can separate the two devices slightly, but keep them within 10 cm (4 in.) of each other.

## Huawei Share

Huawei Share is a wireless sharing technology that allows you to quickly transfer images, videos, documents, and other types of files between devices. This technology uses Bluetooth to discover nearby devices that supports Huawei Share and Wi-Fi Direct to transfer files without using mobile data.

### Enable or Disable Huawei Share



You can enable or disable Huawei Share in either of the following ways:

- Swipe down from the status bar to open the notification panel, then touch  to enable or disable **Huawei Share**. Touch and hold the toggle to enter the **Huawei Share** settings screen.
- Go to  **Settings** > **More connections** > **Huawei Share**, and enable or disable **Huawei Share**.


Enabling Huawei Share automatically turns on Wi-Fi and Bluetooth.

### Quickly Share Files Between Your Devices with Huawei Share

You can use Huawei Share to quickly share files between Huawei devices. The recipient can preview the files before they are sent, then view the full content of the files once they have been received. For example, the recipient can view received pictures or videos in Gallery.


- 1 On the receiving device, enable **Huawei Share**.
- 2 On the sending device, touch and hold to select the files you want to share, then touch . Touch **Huawei Share**, then touch the icon of the receiving device to send the files.
  -  These steps may be different if you are sharing files directly from an app.
- 3 On the receiving device, touch **Accept** to accept the transfer.

To view the received files, go to **Files**, then go to **Internal storage > Huawei Share** on the **Categories** tab.

Received pictures or videos can also be found in  **Gallery > Albums > Huawei Share**.

### Share Files Between Your Device and Computer with Huawei Share

You can use Huawei Share to quickly and easily share files wirelessly between your device and a computer (Windows or macOS).

- 1 Make sure your device and computer are connected to the same Wi-Fi network.
- 2 On your device, go to the **Huawei Share** settings screen and enable **Huawei Share** and **Computer share**.
- 3 Make a note of the name displayed next to **Name shown on computers** and the user name and password under **Verification on computers**.
- 4 On the computer, go to:
  - Windows: **This PC (Computer) > Network**.
  - macOS: **Finder > Go to > Network**.  
 Currently, this feature is only available on Macs running macOS 10.8 to 10.14.
- 5 On your computer, double-click the name of your device and enter the user name and password noted down previously.
- 6 Open a shared folder on your device, such as the Internal storage or Album folder to view, edit, or copy files from your device to your computer or vice versa. Changes made to files in the shared folders on your computer will be automatically synced to your device and vice versa.

### One-Touch Printing with Huawei Share

When a printer that supports Huawei Share is nearby, you can use Huawei Share to find the printer and print out pictures or PDF files stored on your device.

- 1 Depending on the type of printer, ensure the following:
  - Wi-Fi capable printers: The printer must be powered on and connected to the same network as your device.
  - Wi-Fi Direct capable printers: The printer must be powered on and have Wi-Fi Direct enabled.
  - Bluetooth capable printers: The printer must be powered on and discoverable via Bluetooth.
- 2 On your device, preview the file to be printed, then go to **Share > Huawei Share**.
- 3 Once the printer has been discovered, touch its name on your device, and adjust the settings on the preview screen. Then, touch **PRINT** to print.  
 If you are connecting a Bluetooth printer to your device for the first time, find the printer on your device, touch the printer name, then press and hold the Power button on the printer for about 1 second to confirm the connection.

- i** For a list of supported printers, touch **Learn more** on the Huawei Share sharing screen, swipe left on the screen, then touch **What printers are supported?**.

## Connect to a Laptop Using a USB Cable


- 1** Connect your device to a computer with a USB cable. After the driver is automatically installed on the computer, a drive letter corresponding to your device will be displayed.
- 2** On your device, swipe down from the status bar to open the notification panel, go to **Settings > Touch for more options**, and select one of the following modes:
  - **Transfer photos:** Uses the Picture Transfer Protocol (PTP) to transfer photos between your device and computer. In the new drive on the computer, you can view photos stored on your device, or copy and paste photos between the two devices.
  - **Transfer files:** Uses the Media Transfer Protocol (MTP) to transfer media files between your device and computer. In the new drive on the computer, you can view files stored on your device, or copy and paste files between the two devices.
    - i** Install Windows Media Player 11 or later on your computer to view media files stored on your device.
  - **Input MIDI:** Uses the Musical Instrument Digital Interface (MIDI) to use your device as an audio input device to play music on your computer.

## Select USB Connection Mode

- 1** Use a USB cable to connect your device to the computer.
- 2** Swipe down from the status bar to open the notification panel, then go to **Settings > Touch for more options** and select one of the following modes:
  - **Transfer photos:** Uses the Picture Transfer Protocol (PTP) to transfer photos between your device and computer.
  - **Transfer files:** Uses the Media Transfer Protocol (MTP) to transfer media files between your device and computer.
  - **Input MIDI:** Uses the Musical Instrument Digital Interface (MIDI) to use your device as the audio input to play music on your computer.

## Transfer Data Using a USB Cable

- 1** Use a USB cable to connect your device to the computer. After the driver program is automatically installed, a drive named for your device will display on the computer.
- 2** Select an appropriate USB connection mode on your device to transfer data:
  - Select **Transfer photos** in the new drive displayed on the computer to view and copy photos from your device to the computer. You can also view photos stored on your device from the computer, or copy and paste photos between the two devices.
  - Select **Transfer files** in the new drive displayed on the computer to view and copy files from your device to the computer. You can also view files stored on your device from the computer, or copy and paste files between the two devices.

 Install Windows Media Player 11 or a later version on your computer to view media files on your device.

- Select **Input MIDI** to receive and process MIDI messages transmitted by your computer, on your device.

## Connect to a VPN Network


A virtual private network (VPN) is a temporary connection that extends a private network across a public network, encrypting data transmission to provide security.

When working outside the office, you can use a VPN to securely access your company's Intranet.


The following types of servers are supported:

- PPTP: It stands for Point-to-Point Tunneling Protocol, offering MPPE encryption.
- L2TP: It stands for Layer 2 (Data Link Layer) Tunneling Protocol, offering IPsec PSK and IPsec RSA encryption.
- IPsec Xauth: Offering PSK, RSA, and Hybrid RSA encryption.

### Connect to a PPTP Server

- 1 Obtain the VPN server name and address from your VPN server administrator.
- 2 Go to  **Settings** > **More connections** > **VPN** > **Add VPN network**, enter the VPN name, set the server type to PPTP, then enter the server address.
- 3 If the VPN server does not have a DNS address, touch **Show advanced options**, then enter the DNS domain, DNS server address, and forwarding route.
- 4 Touch **Save**.
- 5 Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

### Connect to a L2TP/IPsec PSK Server

- 1 Obtain the VPN server name, server address, L2TP key (optional), IPsec identifier (optional), and IPsec pre-shared key from your VPN server administrator.
- 2 Go to  **Settings** > **More connections** > **VPN** > **Add VPN network**, enter the VPN server name, set the server type to L2TP/IPsec PSK, then enter the server address, L2TP key, IPsec identifier, and IPsec pre-shared key.
- 3 If the VPN server does not have a DNS address, touch **Show advanced options** and enter the DNS domain, DNS server address, and forwarding route.
- 4 Touch **Save**.
- 5 Touch the VPN you have just set up, enter your VPN user name and password, then touch **Connect**.

## Home Screen&Wallpaper

## Manage the Home Screen

You can customise the home screen layout to suit your device usage habits.

### Move an App Icon on the Home Screen

Touch and hold an app icon until your device vibrates, then drag it to the desired position on the home screen.

### Keep Home Screen Icons Aligned

Pinch two fingers on the home screen to access **Home screen settings** mode, then enable **Auto-align**. With this feature enabled, empty spaces will automatically be filled when apps are removed.

### Lock Home Screen Icon Positions

Pinch two fingers on the home screen to access **Home screen settings** mode, then enable **Lock layout**.

### Select the Home Screen Layout Pattern

Pinch two fingers on the home screen, go to **Home screen settings** > **Layout**, then select a layout pattern you prefer.

### Put App Icons in Folders

For easy management of your app icons on the home screen, you can stack similar apps in a folder and name the folder.

- 1 Touch and hold an app icon until your device vibrates, then drag it over another app. A folder will automatically be created to house these two apps.
- 2 Open a folder, touch its name, then enter a name for it.

### Add App Icons to a Folder or Remove Them

Open a folder and touch . Then you can:

- Select one or more apps, and touch **OK** to add them to the folder.
- Deselect one or more apps, and touch **OK** to remove them from the folder. If you deselect all apps, the folder will be deleted.

### Relocate a Screen Page

- 1 Pinch together two fingers on the home screen to access the Home screen editor.
- 2 Touch and hold the screen page you wish to relocate, then drag it to the desired position.

## Display&Brightness

## Brightness, Colour, and Colour Temperature

You can set the screen brightness, colour mode, and colour temperature according to your preferences.




### Automatically Adjust the Screen Brightness

Go to  **Settings** > **Display & brightness**, and enable **Automatic**.


Your device will automatically adjust the screen brightness according to the ambient lighting conditions.

### Manually Adjust the Screen Brightness

You can manually adjust the screen brightness using either of the following methods:


- Swipe down from the status bar to open the notification panel. In the  section, drag the slider to adjust the screen brightness.
- Go to  **Settings** > **Display & brightness**. In the  section, drag the slider to adjust the screen brightness.


### Adjust the Colour Mode

Go to  **Settings** > **Display & brightness** > **Colour mode & temperature**, and select the colour mode that you prefer. **Normal** mode will be easier on your eyes and is therefore recommended.

- **Normal:** natural colour tones
- **Vivid:** vivid colour tones

### Adjust the Colour Temperature

Go to  **Settings** > **Display & brightness** > **Colour mode & temperature**, and select the colour temperature that you prefer. **Default** and **Warm** will be easier on your eyes and are therefore recommended.

- **Default:** a natural tint
- **Warm:** a yellowish tint
- **Cool:** a whitish tint
- You can touch anywhere on the colour circle or drag the spot to adjust the colour temperature.
-  When **Eye Comfort** is enabled, you will need to go to the **Eye Comfort** settings screen to adjust the colour temperature.




### Eye Comfort Mode


Eye comfort mode can effectively reduce blue light and adjust the screen to show warmer colours, relieving eye fatigue and protecting your eyesight.



- After every half hour of screen time, rest your eyes for at least 10 minutes.
  - Look into the distance to adjust the focusing muscles of your eyes and to avoid eye fatigue.
  - Cultivating good eye care habits will protect your vision and prevent near-sightedness.

### Enable or Disable Eye Comfort Mode


- Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts. Touch  to enable or disable **Eye Comfort**. Touch and hold  to access the **Eye Comfort** settings screen.
- Go to  **Settings** > **Display & brightness** > **Eye Comfort**, and enable or disable **Enable**.

Once **Eye Comfort** is enabled,  will be displayed in the status bar, and the screen will take on a yellow tint as a result of emitting less blue light.

### Set a Schedule for Eye Comfort Mode

Go to  **Settings** > **Display & brightness** > **Eye Comfort**, enable **Scheduled**, then set **Start** and **End** according to your preferences.

### Adjust the Colour Temperature for Eye Comfort Mode

Go to  **Settings** > **Display & brightness** > **Eye Comfort**, enable **Enable**, then drag the colour temperature slider for a cooler or warmer screen colour.

### Enable or Disable Flicker Reduction

Go to  **Settings** > **Display & brightness** > **Eye Comfort**, and enable or disable **Flicker reduction**.

Enabling **Flicker reduction** will reduce the amount your screen flickers, but may also affect its colour and brightness.

### Dark Mode

In low light conditions or at night, you can enable **Dark mode** to apply a darker colour scheme, which helps prevent excessive screen light from irritating your eyes.

Go to  **Settings** > **Display & brightness**, and enable or disable **Dark mode**.

### Adjust Text Style Settings

You can adjust the system text size and app display size, as well as the text style.

## Enlarge or Reduce Text Size

Go to  **Settings** > **Display & brightness** > **Text and display size**, and drag the slider for **Text size**.


## Enlarge or Reduce Display Size

**Display size** determines the size of content (including text and images) displayed within apps.


Go to  **Settings** > **Display & brightness** > **Text and display size**, and drag the slider for **Display size**.

## Screen Resolution


### Use Smart Screen Resolution

Go to  **Settings** > **Display & brightness** > **Screen resolution**, and enable **Smart Resolution**. Your device will automatically adjust the screen resolution according to the current running status.

### Set the Screen Resolution


Go to  **Settings** > **Display & brightness** > **Screen resolution**, and select a screen resolution according to your preferences. A higher screen resolution will result in a clearer display, but will consume more power.

## Adjust the Display on a Foldable Device

- 1 Go to  **Settings** > **Display & brightness** > **Folding screen** > **App scaling**.
- 2 Touch **Unfolded** or **Folded** to set up the app display.


## Display Carrier Name and Network Speed in the Status Bar

You can check the carrier name and network speed with a single glance at the status bar.

Go to  **Settings** > **Display & brightness** > **More display settings**, and enable or disable **Display carrier name** and **Display network speed** according to your preferences.

## Switch Between Portrait and Landscape Orientation

The built-in gravity sensor of your device allows you to automatically switch between horizontal and landscape orientations when you rotate the screen.

Swipe down from the status bar to open the notification panel, then swipe down on it again to show all shortcuts. Touch  to enable or disable this feature.


## GPU Turbo

GPU Turbo represents a radical redesign of the graphics processing framework of the device at its most basic level, integrating hardware and software to achieve accelerated graphics processing. It improves the device's graphics processing efficiency, image quality, and performance, whilst simultaneously reducing system power consumption.

The end result is a great improvement in user experience when playing graphically intense games.

## Sounds&Vibration

### Vibrate Mode and More Sound Settings

**1** Go to  **Settings > Sounds & vibration**, and enable or disable **Vibrate in silent mode** according to your preferences.

**2** Touch **More sound settings**. Then you can set the sound for the following items:

- **Keypad tones**
- **Screen lock**
- **Screenshot**
- **Screen touch**
- **Vibrate on touch**
- **Startup sound**




 This feature may vary by device.


### Do Not Disturb

**Do Not Disturb** helps you prevent interruptions when you need to focus. When this mode is enabled, calls and messages will be muted and banner notifications will not be displayed.


#### Enable or Disable Do Not Disturb

You can enable or disable Do not disturb using either of the following methods:

- Swipe down from the status bar to open the notification panel, then swipe down again to display all shortcuts. Touch  to enable or disable **Do Not Disturb**. You can touch and hold  to access the **Do Not Disturb** settings screen.
- Go to  **Settings > Sounds & vibration > Do Not Disturb**, and enable or disable **Do Not Disturb**.

When Do not disturb is enabled,  will be displayed in the status bar. When you receive calls, notifications, or messages, they will be muted, the screen will not light up, and banner notifications will not be displayed.

## Set a Schedule for Do Not Disturb

Go to  **Settings** > **Sounds & vibration** > **Do Not Disturb**, touch **Scheduled**, set the time period and repeat cycle, then enable **Scheduled**.

## Make Exceptions in Do Not Disturb Mode

While in **Do Not Disturb** mode, you can enable your device to ring for calls and messages from certain sources so you don't miss anything important.

Go to  **Settings** > **Sounds & vibration** > **Do Not Disturb**, and enable **Do Not Disturb** or **Scheduled**. Then you can:




- Touch **Calls** or **Messages** and select one of the options. If you set an exception, your device will ring for calls or messages from the selected source.
- Once **Repeated calls** is enabled, a second call from the same number within 15 minutes will not be silenced.

## Set a Ringtone for Incoming Calls

You can set your favorite music or a video as the ringtone for incoming calls.





If two SIM cards have been inserted into your device, configure the ringtone separately for SIM 1 and SIM 2.

### Set a Music Ringtone


- 1 Go to  **Phone** >  > **Settings** > **Ringtone** or  **Settings** > **Sounds & vibration** > **Phone ringtone**.
- 2 Select a system ringtone, or touch **Music on device** to select a local song as the ringtone.

### Set a Video Ringtone

Set a video as the ringtone for incoming calls.

- 1 Go to  **Phone** >  > **Settings** > **Ringtone** or  **Settings** > **Sounds & vibration** > **Phone ringtone**.
- 2 Touch **Video ringtones** and select a video to preview the effect for incoming calls.
- 3 Touch  to set the video as the ringtone.

### Set a Ringtone for a Contact

- 1 Open  **Phone**, touch the **Contacts** tab at the bottom of the screen, then select the contact you want to set a ringtone for.
- 2 On the contact details screen, touch **Ringtone** and select a ringtone.

## Set the SMS Notification Tone


- 1 Go to  **Settings** > **Sounds & vibration**, then touch **Messaging tone**.

- 2 If two SIM cards are being used, you can set SMS notification tones for them individually.
- 3 Select a preset tone, or touch **Music on device** to select a local song as the SMS notification tone.

## Set the Notification Tone


You can set a global notification tone or set tones for specific apps, such as Notepad or Calendar.

### Set the Default Notification Tone

- 1 Go to  **Settings** > **Sounds & vibration**, and touch **Notification sound**.
- 2 Select a preset tone, or touch **Music on device** to select a local song as the notification tone.


### Set the Notification Tone for a Specific App

You can set the notification tone for certain apps by doing the following:

- 1 Go to  **Settings** > **Apps** > **Apps**.
- 2 Select an app (for example, **Notepad**).
- 3 Go to **Notifications** > **Notepad** > **Sound**.
- 4 Select a preset tone, or touch **Music on device** to select a local song as the notification tone.

## Huawei Histen Sound Effects

Huawei Histen sound effects, with 3D surround sound support, deliver vibrant and crisp sound to create an immersive audio experience.

 Huawei Histen sound effects are only available when a headset is plugged in.

Go to  **Settings** > **Sounds & vibration** > **Huawei Histen sound effects** and select an option:

- **Auto**: Automatically identifies what you are playing and intelligently applies sound effects to optimise your experience.
- **3D audio**: Delivers 3D spatial sounds.
- **Natural**: Faithfully reproduces the original sounds.
- **Standard**: Requires less power for audio playback. You can also customise equaliser settings yourself to achieve the exact sound you are looking for.


**Auto**, **3D audio**, and **Standard** modes allow you to select a headset type so you can match the sound effects to your headset.

## Notifications

## App Badges

When new notifications arrive for an app, a badge will appear on the app icon. By default, a numbered badge is displayed. You can also set a dot as the badge, or hide the badge for some or all apps.


### Turn Off App Badges

- 1 Go to  **Settings** > **Notifications**, and touch **App icon badges**.
- 2 Turn off the switch for some or all apps.

### Change the Badge Display Mode


On the **App icon badges** screen, touch **Badge display mode**, and select **Numbers** or **Dots** according to your preference.

### Lock Screen Notifications

Go to  **Settings** > **Notifications** and enable **Hide notification content**. Notification content will no longer be displayed on the lock screen of your device. When **Hide notification content** is disabled, the contents of new notifications will be displayed on the lock screen.


## More Notification Settings

### Notifications Turn on Screen

Go to  **Settings** > **Notifications** > **More notification settings** and enable **Wake screen**. Your device will automatically turn on the screen when it receives a notification.

## Disable App Notifications

### Disable App Notifications in the Notification Panel


When you receive an app notification, swipe down from the status bar to open the notification panel. On a notification, swipe left and hold, go to  > **More settings**, then disable **Allow notifications**.

### Disable App Notifications

Go to  **Settings** > **Notifications**. Then you can:


- Locate and touch the app which you want to disable notifications for, then disable **Allow notifications**.
- Touch **Manage all**, then turn off the switches for multiple apps which you want to disable notifications for.

## Disable App Notifications in Settings


- 1 Go to  **Settings** > **Apps** > **Apps** and search for the app which you want to disable notifications for.
- 2 Touch the app icon, then touch **Notifications** and disable **Allow notifications**.

## Manage App Notifications

### Set the Notification Mode for an App

Go to  **Settings** > **Notifications**, select an app, then set the following:

- **Allow notifications**
- **Banners**
- **Lock screen notifications**
- **Allow interruptions**
- **Sound**
- **Vibration**

 This feature may vary by device.

### Manage Notifications for Multiple Apps


Go to  **Settings** > **Notifications** > **Manage all** and enable or disable **All**.

## Biometrics&Password

### Fingerprint ID


You can enrol a fingerprint and then use it to unlock the screen and access your Safe, App lock, and more.

#### Enrol a Fingerprint

- 1 Go to  **Settings** > **Biometrics & password** > **Fingerprint ID** and follow the instructions to set or enter the lock screen password.
- 2 Touch **New fingerprint** to begin enrolling your fingerprint.
- 3 Place your fingertip on the fingerprint sensor. When you feel a vibration, lift your finger then press again. Move your finger around to enrol different parts of it.
- 4 When the enrolment has been completed, touch **OK**.


You can now place your finger on the fingerprint sensor to unlock the screen.

## Rename or Delete a Fingerprint


- 1 Go to  **Settings** > **Biometrics & password** > **Fingerprint ID** and enter your lock screen password.
- 2 In the **Fingerprint list** section, touch an enrolled fingerprint to rename or delete it.

## Identify a Fingerprint

Fingerprint identification allows you to match your fingers with the enrolled fingerprints.


- 1 Go to  **Settings** > **Biometrics & password** > **Fingerprint ID** and enter your lock screen password.
- 2 In the **Fingerprint list** section, touch **Identify fingerprint**.
- 3 Touch the fingerprint sensor with your finger. The recognised fingerprint will be highlighted.

## Use Your Fingerprint to Access Your Safe

- 1 Go to  **Settings** > **Biometrics & password** > **Fingerprint ID** and enter your lock screen password.
- 2 Turn on the switch for **Access Safe** and follow the onscreen instructions to link your fingerprint with the Safe.

Now you can go to  **Files** > **Categories**, touch **Safe**, then use your fingerprint to access it.

## Use Your Fingerprint to Access a Locked App

- 1 Go to  **Settings** > **Biometrics & password** > **Fingerprint ID** and enter your lock screen password.
- 2 Turn on the switch for **Access App Lock** and follow the onscreen instructions to link your fingerprint with App lock.

You can now touch a locked app on your home screen and use your fingerprint to access it.

## Enable and Use Fingerprint Payment

You can use your fingerprint to verify your payments in a payment app.


Go to the payment app and follow the onscreen instructions to enable this feature.

## Lock Screen Password

You can set a numeric, pattern, or hybrid password as your lock screen password.

### Set the Lock Screen Password

You can set a numeric, pattern, or hybrid password.

- 1 Go to  **Settings** > **Biometrics & password** and touch **Lock screen password**.
- 2 Enter a password containing 6 digits.



- 3 Alternatively, touch **Change unlock method** and select a password type, then follow the onscreen instructions to input a new password.

### Change the Lock Screen Password

- 1 On the **Biometrics & password** screen, go to **Change lock screen password**.
- 2 Enter the original lock screen password.
- 3 Enter a new password, or touch **Change unlock method** to select a password type, then follow the onscreen instructions to input a new password.


### Disable Lock Screen Password

On the **Biometrics & password** screen, go to **Disable lock screen password**.

### Secure Lock Settings

There are many ways your device can be unlocked. In some cases (such as if you are asleep while taking public transport), password unlock is more secure than other unlock methods. When Lockdown mode is enabled, you will only be able to unlock your device using your lock screen password. Other unlock methods will be temporarily disabled.

You must set a lock screen password to use this feature.


- 1 Go to  **Settings > Biometrics & password > Secure lock settings**, and enable **Show Lockdown option**.
- 2 Press and hold the Power button until the **Lockdown** option is displayed on the screen.
- 3 Touch **Lockdown** and follow the onscreen instructions to enable Lockdown mode. Once Lockdown mode is enabled, your device can only be unlocked using the lock screen password.
- 4 Lockdown mode is automatically disabled when you unlock your device. You can use other unlock methods as usual the next time you unlock your device. If you need to re-enable Lockdown mode, press and hold the Power button and touch the **Lockdown** option again.

## Apps

### App Twin


App Twin enables you to log in to two Facebook accounts simultaneously without the hassle of having to constantly switch between them, allowing you to keep your work and private lives separate.

 **App Twin** will only work with certain apps.

- 1 Go to  **Settings > Apps > App Twin**, and turn on the switch for the app you want to create a twin of.
- 2 Two icons for the same app will display on the home screen for you to log in to your separate accounts simultaneously.

- 3** To disable App twin, touch and hold the twinned version of the app, then touch **Delete**. All the data of the twin app will be deleted.

## View or Change App Settings

Go to  **Settings** > **Apps** > **Apps**, and touch an app. You can force stop it, uninstall it, clear the app cache, view and change app permissions, set notification modes, and more.




## Battery

### Check Power Consumption

Go to  **Settings** > **Battery** (or  **Optimiser** > ). You can:

- Touch **Battery usage** to view power-intensive apps. Touch a power-intensive app to enable or disable power consumption alerts.
- Touch **Power consumption details** to learn more about the software and hardware power consumption.

### Power Management

Go to  **Settings** > **Battery** (or  **Optimiser** > ) and touch **Optimise battery usage**. Your device will automatically analyse the current power consumption issues, optimise certain settings, and recommend other setting optimisations.




### Enable Power Saving Mode


**Optimiser** provides two power saving modes:


- **Power Saving mode** reduces power consumption by limiting background app activity, visual effects, and sounds.
- **Ultra Power Saving mode** strictly controls background apps to ensure that your device can stay on for as long as possible. In this mode, you will only be able to use selected apps, and all system switches, except for Wi-Fi and mobile data, will be turned off.

On the **Battery** screen, select a power saving mode:

- When the battery level is extremely low, enable **Ultra Power Saving mode**. Your device will then display a black home screen.

To add apps you wish to use in **Ultra Power Saving mode**, touch  and select the apps from the list. You can touch  to remove the apps or touch  in the upper right corner to exit **Ultra Power Saving mode**.




- When the battery level is not extremely low, but you would still like to save power, enable **Power Saving mode**. The  icon will then be displayed in the status bar.

 **Ultra Power Saving mode** is not available on some devices. If this option is not displayed, it indicates that your device does not support the feature.

## Battery Settings

You can also set whether to display the battery percentage in the status bar, and whether to maintain a network connection when the device screen is turned off.

### Display Battery Percentage on the Status Bar

Go to  **Settings** > **Battery** (or  **Optimiser** > ), touch **Battery percentage**, and choose to display the battery percentage, either inside or outside of the battery icon on the status bar.

### Stay Connected while Your Device is Sleeping

If you would like your device to continue to receive messages or download data while it is in sleep mode, set to keep your device connected when it sleeps. Please note that this may increase power consumption.

On the **Battery** screen, touch **More battery settings**, then enable or disable **Stay connected when device sleeps** as required.


## Storage

### Check Storage Usage

Go to  **Settings** > **Storage** to check storage usage and optimise it when you feel necessary.

### Cleanup

You can use **Cleanup** in **Optimiser** to scan for redundant or large files, such as app residue, unwanted installation packages, WeChat data, and more. Once detected, you can choose whether or not to delete files as suggested.

- 1 Open  **Optimiser**, then touch **Cleanup**.
- 2 When the scan is complete, touch **Clean up** after each item and delete any files you don't need.

### Clean Up Duplicate Files


**Optimiser** can identify duplicate files on your device.

On the **Cleanup** screen, touch **Duplicate files**, then select unwanted files to delete them.


## Security

## Password Vault

Password Vault saves your usernames and passwords and autofills them for you each time you log in to an app. This data is hardware encrypted and stored only on your device. Huawei does not have access to it, and will not upload it to the network or server.

-  Before using Password Vault, set a lock screen password for your device.
- Password Vault is only compatible with certain apps.

### Log In Faster with Password Vault

- 1** When you log in to an app for the first time, your device will automatically prompt you to save the password. Touch **SAVE** when prompted.  
If you accidentally touch **Never save**, you can still enable the autofill feature for this app by going to  **Settings** > **Security** > **Password Vault** > **Autofill settings**, and toggling on the switch next to this app. When the switch is toggled off, the autofill feature will be disabled.
- 2** If you log out of the app, the next time you log in, your device will autofill the username and password once you have verified your identity with your lock screen password, fingerprint, or face ID.

When you switch to a new Huawei device, you can use Phone Clone to transfer data in Password Vault to your new device.

### View or Delete Stored Usernames and Passwords

You can view or delete the usernames and passwords stored in Password Vault at any time.

Go to  **Settings** > **Security** > **Password Vault** > **ACCOUNTS** to view or delete the stored usernames and passwords.

### Disable Password Vault

Password Vault is enabled by default, but can be disabled if required.

Go to  **Settings** > **Security** > **Password Vault**, and disable **Password Vault**.

## App Lock

Go to  **Settings** > **Security** > **App Lock** > **Enable**, set the App Lock password and select the apps to lock.

-  Not all devices support fingerprint features.


### Change the App Lock Password or Security Questions

Enter the **App Lock** settings screen, go to  > **Password type**, and select **Lock screen password** or **Custom PIN** as the App Lock password.

If you select **Custom PIN**, you can go on to set a new password and security questions.



## Cancel or Disable App Lock

On the **App Lock** settings screen, do the following:

- **Cancel App Lock:** On the locked app list, toggle off the switches beside the apps for which you want to cancel the lock.
- **Reset App Lock:** Go to  > **Disable App Lock** > **DISABLE**. This will cancel all locks, and clear all app lock settings.

## Smart Unlock


**Smart Unlock** enables you to unlock your device with a Bluetooth device, like a smart band. When a compatible Bluetooth device is detected, you can unlock your device with a simple swipe.

- 1 Go to  **Settings** > **Biometrics & password** > **Smart Unlock**.
- 2 Touch **Step 1: Set an unlock method**, and follow the onscreen instructions to set the lock screen password. If a lock screen password has been set, skip this step.
- 3 Touch **Step 2: Add a Bluetooth device**, enable **Smart Unlock**, touch , then pair a Bluetooth device, like a smart band.
- 4 On the **Smart Unlock** settings screen, touch **Paired devices**, then follow the onscreen instructions to set this device as the **Unlocking device**.


To learn more about **Smart Unlock**, touch  on the **Smart Unlock** settings screen.

## Encrypt Memory Card Data

You can encrypt files stored on the memory card. Encrypted files can only be viewed and used on your device.

- 1 Insert a memory card into your device and ensure that the memory card has sufficient storage space.
- 2 Go to  **Settings** > **Security** > **More settings** > **Encryption and credentials**.
- 3 Touch **Encrypt memory card** and follow the onscreen instructions to encrypt the memory card.  
During the encryption, do not restart your device or forcibly remove the memory card. Otherwise, the encryption may fail or data may be lost.



To decrypt a memory card, touch **Decrypt memory card** and follow the onscreen instructions to decrypt files on the memory card. Formatting a memory card can also decrypt the memory card, but will erase all data on the memory card.

-  Encrypting and decrypting the memory card will not be supported if you are not logged in as the Owner.

## Set a SIM PIN Lock

A PIN is the identity code of a SIM card, and can be set as the SIM card lock. After doing so, you will be required to enter the correct PIN to unlock the SIM card every time you power on your device or switch to a new device to prevent unauthorised access.





You need to obtain the PIN of your SIM card from your carrier before using this function.

- 1 Go to  **Settings** > **Security** > **More settings** > **Encryption and credentials** to enter the SIM lock setup screen.
  - 2 Enable **Lock SIM card**, enter the PIN code, and then touch **OK**.  
To modify the PIN, touch **Change SIM PIN** and follow the instructions.
-  You will have to enter a PIN Unlocking Key (PUK) to unlock the SIM card if you exceed the maximum number of failed attempts to enter the PIN. A new PIN needs to be set up once you successfully unlock your SIM with a PUK. Should you also exceed the maximum number of failed attempts to enter the PUK, your SIM card will be blocked.
    - The PUK can only be obtained from your carrier.

## Pin a Screen

You can pin the screen of an app so you can stay focused on it. Try this feature when playing games, watching videos, and more.

Go to  **Settings** > **Security** > **More settings** > **Screen pinning**, and enable **Screen pinning**.


- When using gesture navigation, swipe up from the bottom of the screen and hold to access the recent tasks screen, then touch  on an app preview. To unpin, swipe up twice from the bottom of the screen.
- When using three-key navigation, touch  to access the recent tasks screen, and touch  on an app preview. To unpin, touch and hold .

## Safe Mode

Safe mode uses a simplified operating system with only basic functions and pre-installed apps available. It can be used to locate third-party apps causing system failures.

### Safe Mode Functions

After installing certain third-party apps, your device may fail to work properly. In this case, you can enter Safe mode to check whether the problem has been caused by a third-party app or by the system itself.

- If the system is running properly in Safe mode, the issue is likely caused by a third-party app. In Safe mode, go to  **Settings** > **Apps** > **Apps**, find the third-party app in question, and uninstall it after switching back to the normal mode.
- If the system runs abnormally in Safe mode, then the system is faulty. Back up your data and take your device and proof of purchase to an authorised Huawei Customer Service Centre for assistance.

### Enter and Exit Safe Mode

- Enter **Safe mode**: During the startup process, press and hold the Power and Volume up buttons simultaneously until the selection screen is displayed. Press the Volume button to select **Safe mode** and press the Power button to enter Safe mode. In Safe mode, **Safe mode** is displayed in the lower left corner.
- Exit **Safe mode**: Restart your device to exit.

## Privacy


### Permission Management

Apps may require certain permissions, such as the Location permissions, in order to provide you with corresponding services.

However, some apps may obtain too many unnecessary permissions, posing potential risks to your privacy and information security. You can monitor the permissions granted to each app and deny those you deem unnecessary.

### Manage the Location Permission

With the location permission, apps can obtain your location to provide location-based services. For example, if a map app obtains the location permission, it can provide you with location and navigation services. You can disable the permission if you do not need these services.

- 1 Go to  **Settings** > **Apps** > **Permissions**.
- 2 On the **Permissions** screen, enter **Location**, touch the app you want to manage, and select an option.

### Manage Permissions to Access Other Private Data

You can also manage permissions to access your personal data, such as Contacts, Messaging, Call logs, Body sensors, Calendar, and Camera, to enjoy better services and protect your privacy.



On the **Permissions** screen, touch the permission you want to manage, and toggle the switch for each app on or off as required.

## Location Services

Some apps need to obtain your location information to provide better services. You can enable or disable location services, and grant or deny the permission to access location information for particular apps as required.

### Enable or Disable Location Services


You can enable or disable location services in either of the following ways:

- Swipe down from the status bar to open the notification panel and swipe down further to display all shortcut switches. Touch  to enable or disable this function.
- Alternatively, go to  **Settings** > **Location** and enable or disable **Access my location**.

After location services are disabled, your device will prevent all apps and services from collecting and using location information, with the exception of some built-in apps. When these apps or services need to use location information, your device will remind you to enable location services again.


### Increase the Accuracy of Location Services

You can improve the positioning accuracy of your device by allowing apps and services to scan for nearby Wi-Fi networks and Bluetooth devices.

Go to  **Settings** > **Location** > **Advanced settings**, then enable Wi-Fi and Bluetooth scanning.

### Allow or Forbid Apps to Obtain Location Information

You can allow or forbid an app to access location information, including granting one-time or permanent access, or denying access to location information during use of the app.

- 1 Go to  **Settings** > **Privacy** > **Permissions**, touch **Location**, and check which apps have been granted access to location information.
- 2 Touch the app for which you want to change settings and follow the onscreen instructions to grant or deny permissions.  
Touch **All** to display a drop-down menu, and you can then filter apps that have been denied the Location permission, or allowed the permission all the time or only while in use.




## PrivateSpace

Create a PrivateSpace that is completely independent of the MainSpace (the original space) of your device, which can be accessed using your fingerprint ID or a password.

You can move private photos and confidential business files to your PrivateSpace to prevent unauthorised access. You can also move your payment and gaming apps to PrivateSpace to keep them away from your child.





## Enable and Access PrivateSpace


- 1 Go to  **Settings** > **Privacy** > **PrivateSpace** > **Enable**, and follow the onscreen instructions to create a PrivateSpace.
  - 2 You can enter your PrivateSpace using either of the following methods:
    - On the lock screen, access PrivateSpace using the fingerprint or password set for the space.
    - Alternatively, in MainSpace, go to  **Settings** > **Privacy** > **PrivateSpace**, and touch **Log in**.
-  If you restart your device, you have to enter the password to access the MainSpace first, then switch to the PrivateSpace.

## Hide or Unhide the Entrance to PrivateSpace

You can hide the entrance to PrivateSpace in the MainSpace settings, so that you can only access PrivateSpace using the fingerprint or password set for the space.

- To hide the entrance to PrivateSpace: In PrivateSpace, go to  **Settings** > **Privacy** > **PrivateSpace**, and enable **Hide PrivateSpace**.
- To unhide the entrance to PrivateSpace: In MainSpace, go to  **Settings** > **Security** > **More settings**, then go to **Show all settings** > **OK**.




## Transfer Files Between MainSpace and PrivateSpace

- 1 In PrivateSpace, go to  **Settings** > **Privacy** > **PrivateSpace**, and touch **MainSpace to PrivateSpace** or **PrivateSpace to MainSpace**.
- 2 Select the files (such as contacts, photos, videos, and audio files) you want to transfer, touch **Move**, and follow the onscreen instructions to transfer the files.

In the target space, go to **Gallery** > **Albums** > **Others** > **SharedImages**, or **Gallery** > **Albums** > **Others** > **SharedVideos** to view photos and videos.



## Reset Password for PrivateSpace

You can set a security question when creating the password for PrivateSpace, which will help you to reset the password if you happen to forget it.

- 1 In PrivateSpace, go to  **Settings** > **Privacy** > **PrivateSpace**, then touch **Password protection**.
- 2 Follow the onscreen instructions to complete the verification, select and answer the security question, then touch **Finish**.
- 3 In MainSpace, go to  **Settings** > **Privacy** > **PrivateSpace**, then go to  > **Reset password**, and follow the onscreen instructions to complete the verification and reset the password.

## Transfer Data in PrivateSpace to Your New Device

You can quickly transfer your PrivateSpace data, such as contacts, photos, and files, from the old device to the new one.

- 1 On your new device, create and enter your PrivateSpace, go to  **Settings** > **Privacy** > **PrivateSpace** > **Space Clone**, and select **This is the new phone**.
- 2 In your old device, enter your PrivateSpace, go to  **Settings** > **Privacy** > **PrivateSpace** > **Space Clone**, and select **This is the old phone**.
- 3 Follow the onscreen instructions to scan the QR code or manually connect the old device to the new one.
- 4 On your old device, select the data to be transferred. You can cancel the data transfer during the process, and then continue it once you have connected your old device with the new one again.

## Delete PrivateSpace

If you delete PrivateSpace, all apps and data stored in the space will be deleted and cannot be restored. Please exercise caution when deleting PrivateSpace.

You can delete PrivateSpace in either of the following ways:

- In MainSpace, go to  **Settings** > **Privacy** > **PrivateSpace**, then go to  > **Delete PrivateSpace**.
- Alternatively, in PrivateSpace, go to  **Settings** > **Privacy** > **PrivateSpace**, then touch **Delete**.


# Accessibility Features

## Accessibility

Screen reader apps are designed to assist visually impaired users to use a device.

### Enable Colour Correction to Customise the Screen Colour

Colour correction helps people with poor eyesight see the screen content more easily.

- 1 Go to  **Settings** > **Accessibility features** > **Accessibility** > **Colour correction** and enable **Colour correction**.
- 2 Touch **Correction mode** to select a colour correction mode.

### Use Magnification Gestures

Use magnification gestures to zoom in on the screen.

On the **Accessibility** > **Magnification** screen, touch **Magnification**, then enable it.

Zoom in or out by touching the screen three times in a row.

- While zoomed in, spread two or more fingers to further zoom in, then pinch two or more fingers together to zoom back out.
- Drag the screen with two or more fingers to view other parts of the screen.

### Enable Colour Inversion

Colour inversion allows you to invert the colour of the text and the background. When Colour inversion is enabled, your device will display text in white and the background black.

On the **Accessibility** screen, enable **Colour inversion**.

### Use a Shortcut to Activate an Accessibility Feature

You can use Volume buttons to quickly activate an accessibility feature.

- 1 On the **Accessibility** screen, touch **Accessibility shortcut**.
- 2 Touch **Select feature** to select the feature you want to activate with the shortcut.
- 3 Enable **Accessibility shortcut**. You can now press and hold the Volume up and down buttons simultaneously for 3 seconds to activate the feature.


### Adjust the Touch and Hold Delay

Touch & hold delay allows you to adjust the time the screen takes to respond when you touch and hold something.

On the **Accessibility** screen, touch **Touch & hold delay**, then select a delay option according to your preferences.

### Mistouch Prevention


Enable **Mistouch prevention** to prevent unintended operations caused by accidental touches on the screen, such as when your device is placed in your pocket or backpack.

Go to  **Settings** > **Accessibility features**, and enable or disable **Mistouch prevention** as needed.

### Gloves Mode

Your device can respond to your touches even when you are wearing gloves.

Go to  **Settings** > **Accessibility features**, and enable **Gloves mode**.

-  To ensure a higher success rate, apply adequate force when touching or swiping on the screen.

### Scheduled Power On/Off

Use the **Scheduled power on/off** feature to power your device on and off at set times, to save power and prevent interruptions while resting.


- 1 Go to  **Settings** > **Accessibility features** > **Scheduled power on/off**, and enable **Scheduled power on/off**.

- 2 Set the power on and off times, as well as the repeat cycle. Your device will power on and off automatically at the specified times.

To stop using this feature, disable **Scheduled power on/off**.

## Users&Accounts


### Set Up Users

- 1 Go to  **Settings** > **Users & accounts** > **Users**, touch **Add user** or **Add guest**, then follow the onscreen instructions to add an account.
- 2 Touch **Switch** to switch to the user or guest account. Configure the settings for the new account as prompted.
- 3 Install apps as needed. Note that if a newer version of an app has been installed by another user, the app installation will fail.

A maximum of three user and one guest accounts can be added.



### Authorise a User or Guest Account to Make Calls and Send Messages

You can set whether to allow a user or guest account to make calls, send SMS messages, and more.

- After accessing your device as the administrator, go to  **Settings** > **Users & accounts** > **Users**.
- Touch the related account, and select the permissions you want to authorise.

### Switch Between the Administrator, User, and Guest


You can switch to a different account using either of the following methods:


- Swipe down from the status bar to open the notification panel, touch , then touch the profile picture of the account you wish to switch to.
- Go to  **Settings** > **Users & accounts** > **Users**, and touch the name of the account you wish to switch to.

### Delete a User or Guest Account

Deleting a user or guest account will delete all its related data. Please exercise caution.


After accessing your device as the administrator, use either of the following methods to delete a user or guest account:

- Go to  **Settings** > **Users & accounts** > **Users**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.

- Swipe down from the status bar to open the notification panel, touch  > **More settings**, touch the name of the account you wish to delete, then follow the onscreen instructions to delete it.


## System&Updates

### Language and Region

- 1 Go to  **Settings** > **System & updates** > **Language & input** > **Language and region**, then select the language you want to use.
- 2 If the language is not listed, touch **Add language**, then locate and touch it to add it to the list.
- 3 Touch **Region** to select a country/region, so the display content will adapt to the local culture and habits of the country/region you have selected.

### Input Method

You can download a third-party input method and set it as the default input method.

- 1 Download the input method from an official app market.
- 2 Follow the onscreen instructions to set it as the default input method, or go to  **Settings** > **System & updates** > **Language & input** > **Default keyboard** and select the input method.

### Date and Time

Your device is able to sync to the local date, time, and time zone over a mobile network. You can also manually set the date, time, and time zone for your device.

Go to  **Settings** > **System & updates** > **Date & time**, then set the options according to your requirements.

#### Set the Date and Time Automatically or Manually

- Enable **Set automatically**, and your device will sync to the local date and time over a mobile network.
- To manually set the date and time, disable **Set automatically**.

#### Change the Time Zone

- Enable **Set automatically**, and your device will sync to the local time zone over a mobile network.
- To manually set the time zone, disable **Set automatically**.




#### Change the Time Format


- Enable **24-hour time** and your device will display time in the 24-hour format.
- Disable **24-hour time** and your device will display time in the 12-hour format.

## Phone Clone




**Phone Clone** lets you quickly and seamlessly move all the basic data (including contacts, calendar, images, and videos) from your old device to your new device.


### Clone Data from an Android Device

- 1 On your new device, open  **Phone Clone** . Alternatively, go to  **Settings > System & updates > Phone Clone**, touch **This is the new phone**, then touch **Huawei** or **Other Android**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then touch **Transfer** to start cloning.

 Phone Clone is only available on devices running Android 4.4 or later.

### Clone Data from an iPhone or iPad


- 1 On your new device, open  **Phone Clone**. Alternatively, go to  **Settings > System & updates > Phone Clone**, touch **This is the new phone**, then touch **iPhone/iPad**.
- 2 Follow the onscreen instructions to download and install **Phone Clone** on your old device.
- 3 On your old device, open  **Phone Clone** and touch **This is the old phone**. Follow the onscreen instructions to connect your old device with your new device by scanning a code or connecting manually.
- 4 On your old device, select the data you want to clone, then follow the onscreen instructions to complete the data cloning.

 Phone Clone is only available on devices running iOS 8.0 or later.


## Back Up with an External Storage Device

### Back Up with a Memory Card

Insert a memory card in your device so you can conveniently back up your data to keep it safe.

- 1 Go to  **Settings > System & updates > Backup & restore > Data backup > External storage** and touch **Memory card**.
- 2 Touch **BACK UP**, select the data you want to back up, then touch **Back up**.
- 3 Follow the onscreen instructions to set the password and password hint. The data will be encrypted and backed up. The password will be required if you want to restore your data backup.


To reset the password, go to the **Memory card** backup screen, then  > **Reset password**.

 The new password is only valid for backups created thereafter.

- 4 After the backup is complete, you can find your data backup in the **Huawei** folder in **Files** > **Categories** > **Memory card**.

You can go to the **Memory card** backup screen and enable **Auto-backup**. Your device will then automatically back up your data every seven days when it is being charged, the screen is turned off, and the battery level is at least 75%.

### Restore Your Backup from a Memory Card

- 1 Go to  **Settings** > **System & updates** > **Backup & restore** > **Data backup** > **External storage** and touch **Memory card**.
- 2 Select the backup you want to restore from the **RESTORE FROM BACKUP** list.
- 3 Select the data you want to restore, touch **Restore**, and enter the password as prompted.

### Back Up with a USB Storage Device

In case of insufficient storage space on your device, you can back up large files and any data on a USB storage device, such as a USB flash drive or card reader.

- 1 Connect your device to a USB storage device via a USB OTG cable.
- 2 On the **External storage** screen of your device, touch **USB storage**.
- 3 Touch **BACK UP**, select the data you want to back up, then touch **Back up**.
- 4 Follow the onscreen instructions to set the password and password hint. The data will be encrypted and backed up. The password will be required if you want to restore your data backup.

To reset the password, go to the **USB storage** backup screen, then  > **Reset password**.

 The new password is only valid for backups created thereafter.

### Restore Your Data from a USB Storage Device

- 1 Connect your device to a USB storage device via a USB OTG cable.
- 2 On the **External storage** screen of your device, touch **USB storage**.
- 3 Select the backup you want to restore from the **RESTORE FROM BACKUP** list.
- 4 Select the data you want to restore, touch **Restore**, and enter the password as prompted.

### Back Up with a NAS Device

You can back up your important data on a network-attached storage (NAS) device, also known as a private cloud storage server. The NAS device provides shared folders for data backup.

- 1 On the **External storage** screen of your device, touch **Shared folder**.

- 2 On your device, scan for available NAS devices using your Wi-Fi network, then touch an applicable one to access and add its shared folders.
- 3 Touch **BACK UP**, select the data you want to back up, then touch **Back up**.
- 4 Follow the onscreen instructions to set the password and password hint. The data will be encrypted and backed up. The password will be required if you want to restore your data backup.

To reset the password, go to the **Shared folder** backup screen, then  > **Reset password**.

 The new password is only valid for backups created thereafter.


## Restore Your Data from an NAS Device

- 1 On the **External storage** screen of your device, touch **Shared folder**.
- 2 On your device, scan for available NAS devices using your Wi-Fi network, then touch an applicable one to access and add its shared folders.
- 3 Select the backup you want to restore from the **RESTORE FROM BACKUP** list.
- 4 Select the data you want to restore, touch **Restore**, and enter the password as prompted.

## Reset Your Device


### Reset Network Settings

This operation will reset your Wi-Fi, mobile data network, and Bluetooth settings. It will not change any other settings on your device or delete any data.

Go to  **Settings** > **System & updates** > **Reset**, touch **Reset network settings**, then follow the onscreen instructions to reset network settings.


### Reset All Settings

This operation will reset all network settings, fingerprints, face recognition data, and the lock screen password of your device. It will not delete any data from your device.

Go to  **Settings** > **System & updates** > **Reset**, touch **Reset all settings**, then follow the onscreen instructions to reset all settings.

### Restore Factory Settings


This operation will erase all the data on your device, including your accounts, app data, system settings, installed apps, music, images, and all files on the internal storage. Make sure to back up your data before restoring your device to its factory settings.

Go to  **Settings** > **System & updates** > **Reset** > **Reset phone**, touch **Reset phone**, then follow the onscreen instructions to restore your device to its factory settings.



## Update the System Online

When an update is available, your device will prompt you to download and install the update package.


-  Before updating, make sure your device is running an official system version. Otherwise, the update may fail and your device may experience unknown issues.
- Back up your user data before the update.
- After an update, third-party apps that aren't compatible with the new system version may become unavailable. In some cases, it may take some time for a compatible app version to be released.
- During the update, do not power off or restart your device, remove the memory card, or insert a memory card.

**1** Go to  **Settings** > **System & updates**, and touch **Software update**.

**2** When an update is available, you can either manually download and install the update package, or update your device automatically overnight.

- Download and install the update package: Go to **New version** > **DOWNLOAD AND INSTALL**. To avoid data usage, connect your device to a Wi-Fi network when downloading the update package.

Your device will automatically restart once the update is complete.

- Update overnight: Touch , and enable **Auto-download over Wi-Fi** and **Update overnight**.

Your device will automatically update and restart between 02:00 – 04:00.

To ensure a successful overnight update, make sure that your device is powered on, the screen is locked, there are no alarms set for this period of time, and the battery level remains higher than 35%. Connect your device to a charger if necessary.

To disable automatic updates, touch  on the **Software update** screen, then disable **Auto-download over Wi-Fi**.

## About Phone

### Legal Disclaimer

**Copyright © Huawei Technologies Co., Ltd. 2020. All rights reserved.**

The product described in this document may include software that is the copyright of Huawei or its licensors. Such software shall not be reproduced, distributed, modified, decompiled, disassembled, decrypted, extracted, reverse engineered, leased, assigned, or sublicensed unless such restrictions are prohibited by law or such actions are approved by the copyright holder.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Please visit <http://consumer.huawei.com/en/support/hotline> for recent updated hotline and email address in your country or region.

Model: TAH-N29m

EMUI 10.0.1\_01