




Actual formatted capacity may vary.

See www.patriotmemory.com/support/USB-SD-formattedCapacity.pdf for more information.

CORPORATE HEADQUARTERS 47027 Benicia Street Fremont, CA 94538 USA TEL: 510,979,1021 WITHIN USA 800,800,9600

APAC SALES OFFICE 11F, No.700, Jhong Jheng Road, Jhong He District, New Taipei City, Taiwan, R.O.C. TEL: +886.2.8228.0333

EMEA SALES OFFICE Innsbruckweg 190-192 3047 AH Rotterdam The Netherlands TEL: +31 (0) 10,2931250

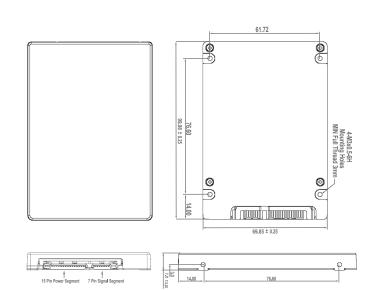

Power Segment Pinout					
PIN	SIGNAL NAME				
P1	Not Used (3.3V)				
P2	Not Used (3.3V)				
P3	Not Used (3.3V Pre-Charge)				
P4	GND				
P5	GND				
P6	GND				
P7	5V Pre-Charge				
P8	5V				
P9	5V				
P10	GND				
P11	Reserved				
P12	GND				
P13	Not Used (12V Pre-Charge)				
P14	Not Used (12V)				
P15	Not Used (12V)				
Signal Segment Pinout					
PIN	SIGNAL NAME				
S1	GND				
S2	RxP				
S3	RxN				
S4	GND				
S5	TxN				
S6	TxP				
S 7	GND				

General Manufacturer Model Interface	Patriot SSD 2.5" SATA III			
Drive Capacity	120GB, 240GB			
Dimensions Length-Width-Height	100 x 69.85 x 6.90mm			
Power Consumption	Capacity 120GB 240GB	Read 1.3W 1.3W	Write 2.0W 2.6W	Idle 0.3W 0.3W
S.M.A.R.T. Support MTBF Data Reliability	YES 2,000,000 hours LDPC			
Environment Operating Temp. Storage Temp. Operating Shock Vibration Humidity	0°C-70°C -40°C-85°C 1,500G (@ 0.5msec half sine wave) 20G Peak (80°2000Hz) 0°C-40°C / 93% RH, 72 Hours			
O/S Support	Windows® XP , Windows Vista® Windows® 7 , 8 , 10 Linux and Mac® OS			
Certification	CE/FCC/RoHS			
Warranty	3 Years			

*Actual usable memory capacity may vary, 1MB equals 1 million bytes; 1GB equals 1 billion bytes.

Installation for Computer Systems (Desktops and Servers):

- 1. Power down the computer and make sure power is unplugged from the wall outlet.

- 2. Remove the computer case cover.

 3. Install the SSD in an open hard drive bay.

 4. Connect the SSD cable to an open SATA host connector on the motherboard.

 5. Plug in the SSD power directly from the power supply.

- Now a computer case cover.
 Power on your computer.
 Please enter the BIOS and ensure that the SSD is recongized in the BIOS.

Installation for Notebooks:

- Power down the notebook.
 Remove the notebook battery and power cable.
 Unscrew and remove the notebook's hard drive cover.
- 3. Unscrew and remove the notebook's hard drive cover.
 4. Remove the hard drive from the bay,
 5. If there is a connector or spacer bracket attached to your hard drive, please remove it.
 6. Attach the connector or spacer braket to the new SSD.
 7. Align the pins of the SSD to the drive bay. Slide firmly into drive bay.
 8. Reattach the panel and the screw.
 9. Reinstall the battery and power cable.
 10. Power on your notebook.
 11. Please enter the BIOS and ensure that the SSD is recongized in the BIOS.

Patriot's Free Technical Support

We strive to provide outstanding customer service. If you have any questions regarding your SSD or any of our products, please contact Technical Support directly at support@patriotmem.com or visit us at www.patriotmemory.com.